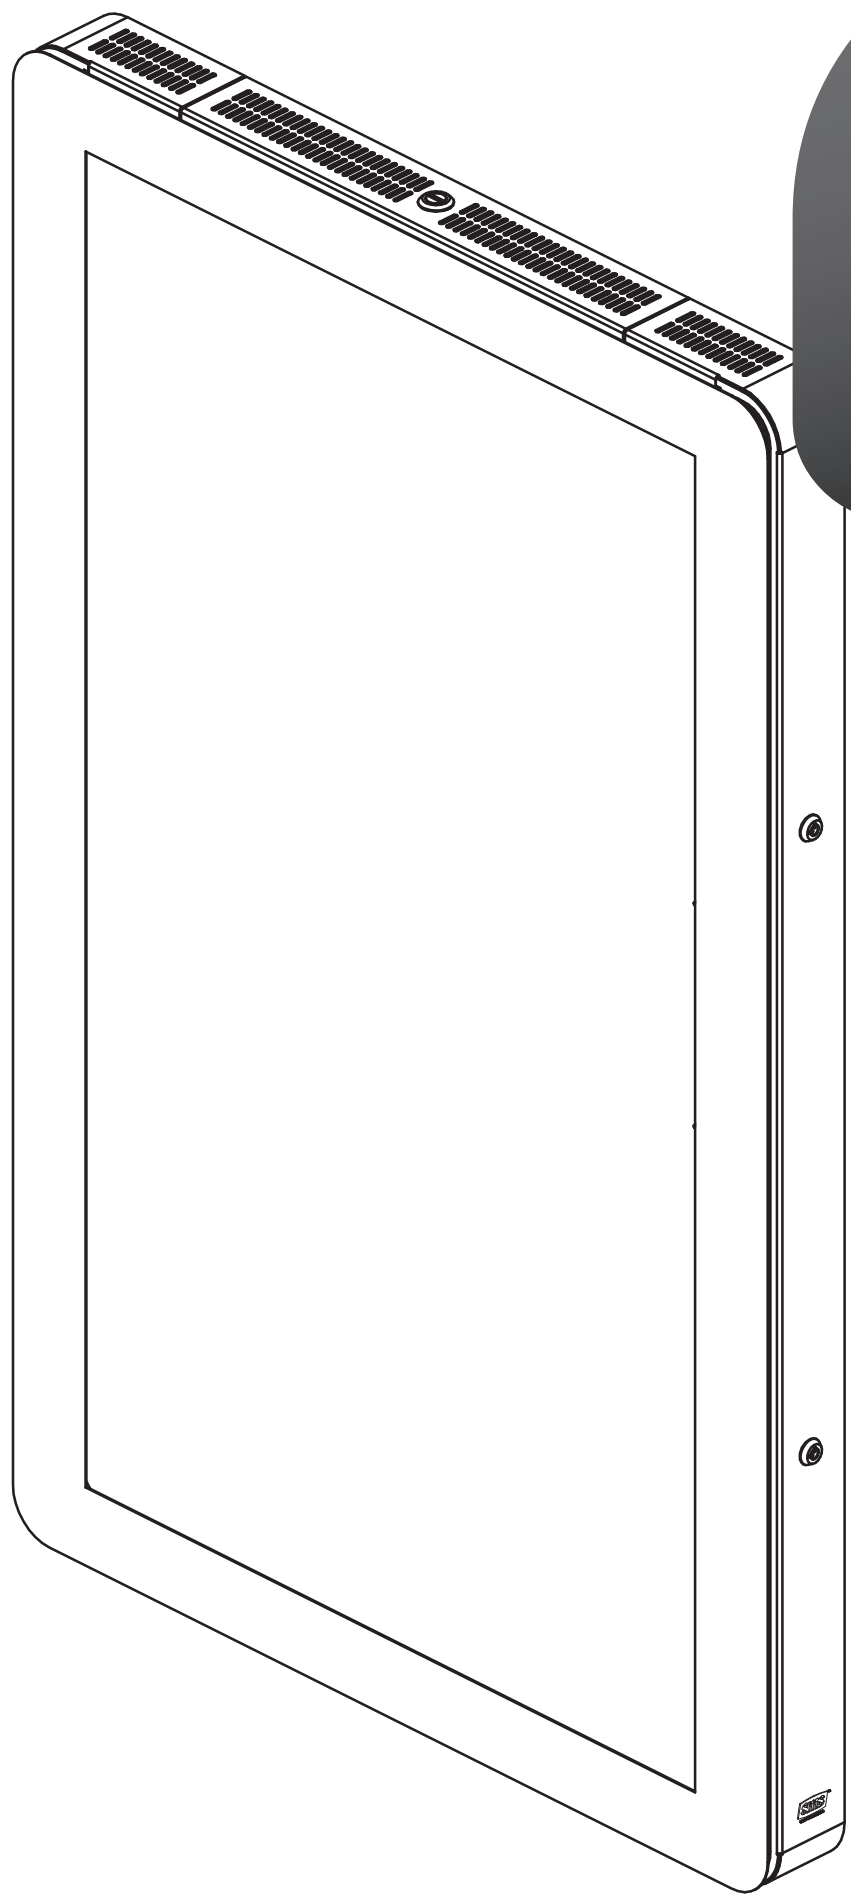


Original language English

SMS MEDIA CABINET INDOOR WALL


Installation and Adjustment Manual

DE	Handbuch für Installation und Anpassung
IT	Manuale per l'installazione e la regolazione
ES	Manual de instalación y ajuste
FI	Asennus- ja säätöohje
FR	Manuel d’installation et de réglage
NL	Handboek voor installatie en instellingen
PL	Instrukcja instalacji i konfiguracji
RUS	Инструкция по установке и регулировке
ARB	إرشـادات حول التثبيـــت والتكـــوين
SE	Monterings- och justeringsmanual
GR	Εγχειρίδιο εγκατάστασης και ρύθμισης

SMART MEDIA SOLUTIONS


Assembly Instructions

You will need

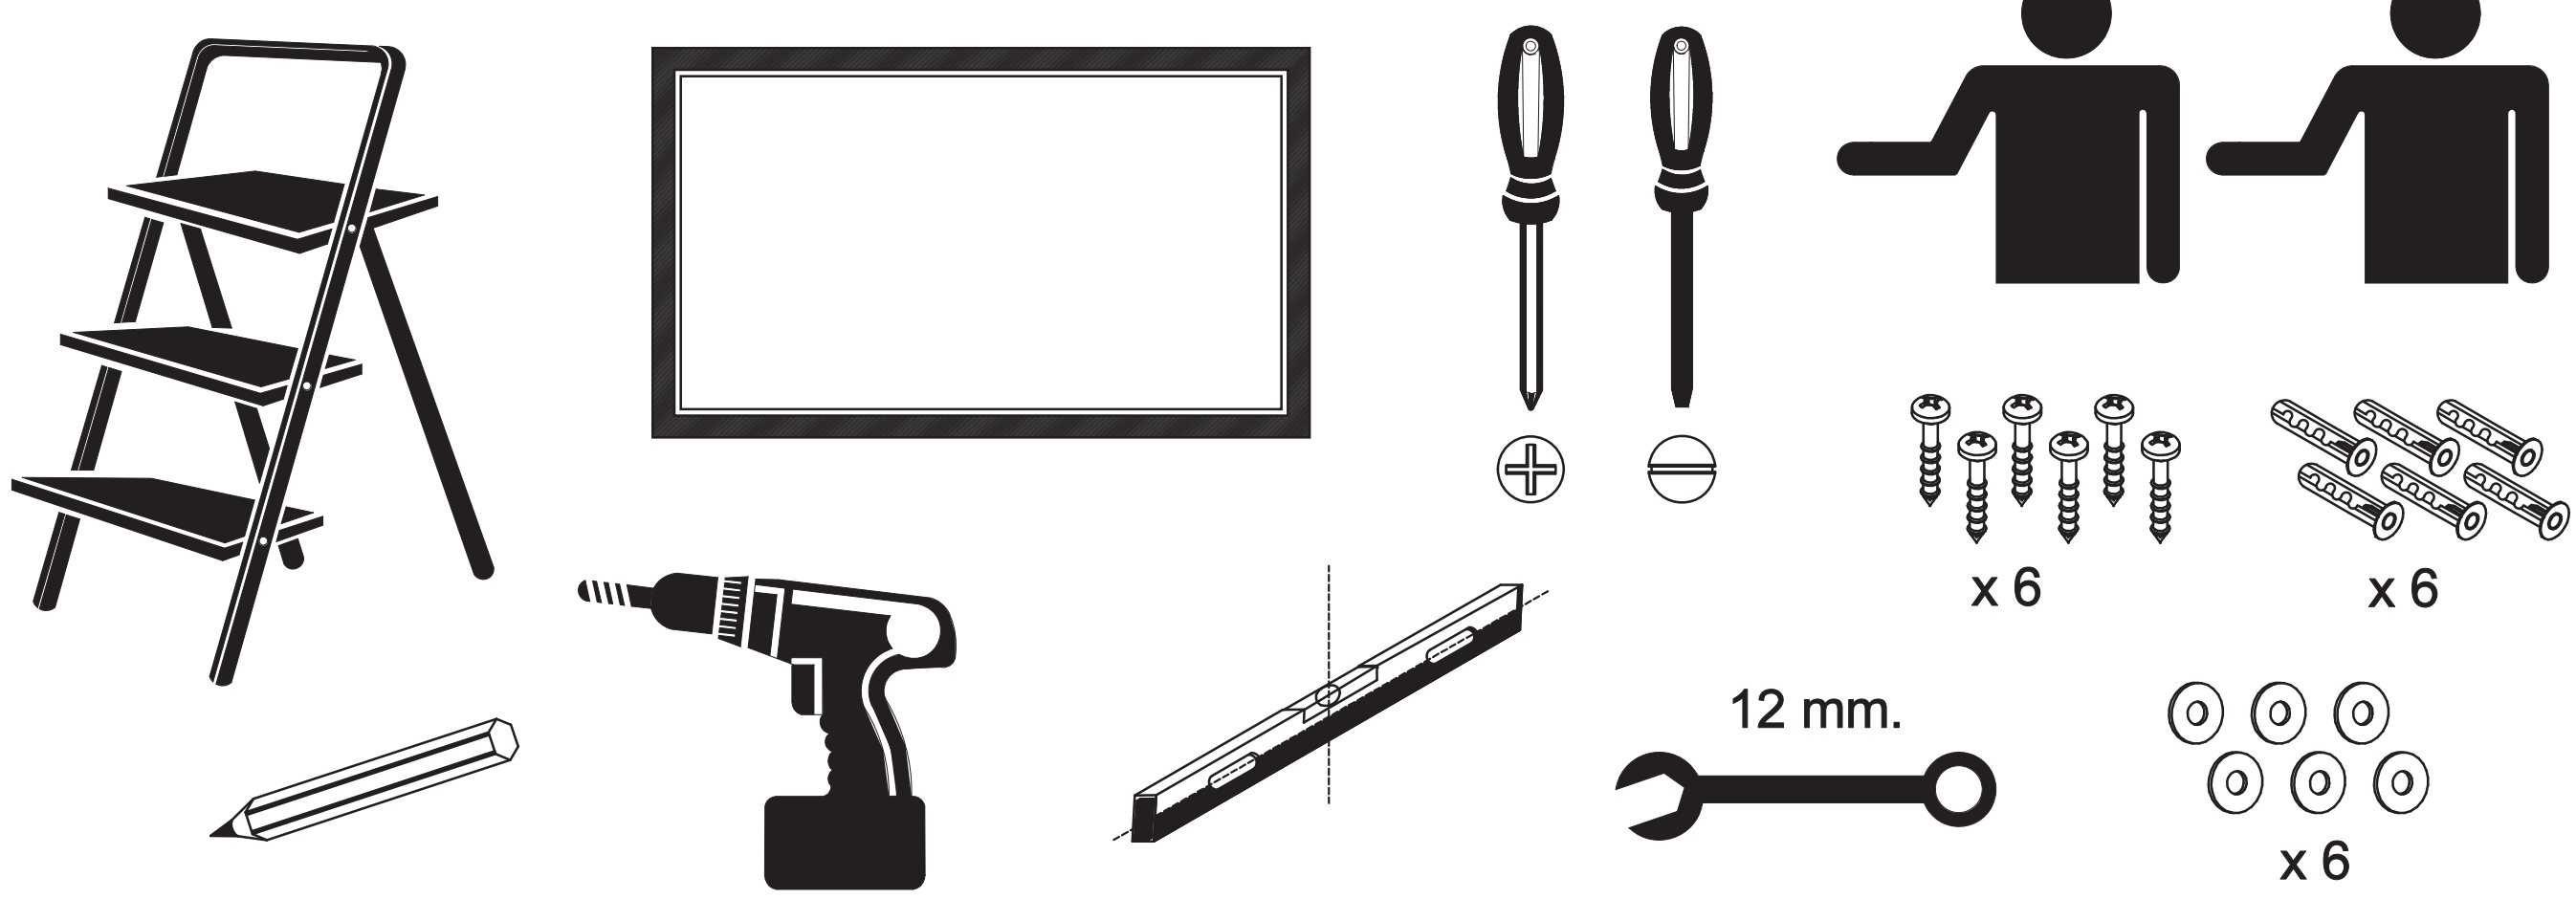


List of parts

40” Cabinet /
46” Cabinet /
55” Cabinet

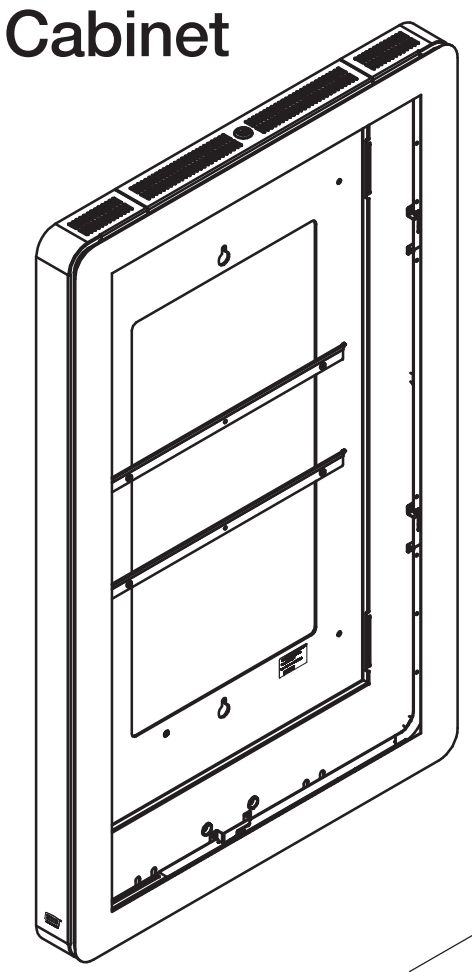




ADDITIONAL ITEM

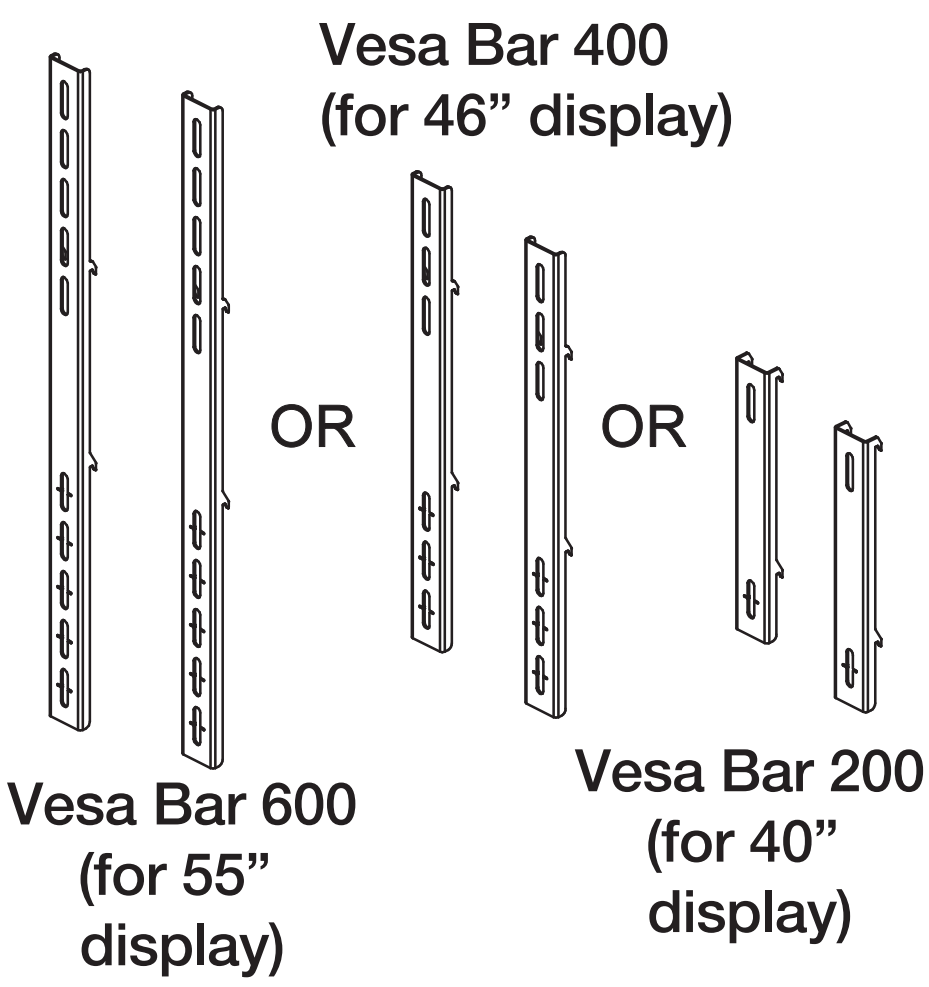


Screw Kit (with Vesa Bars)

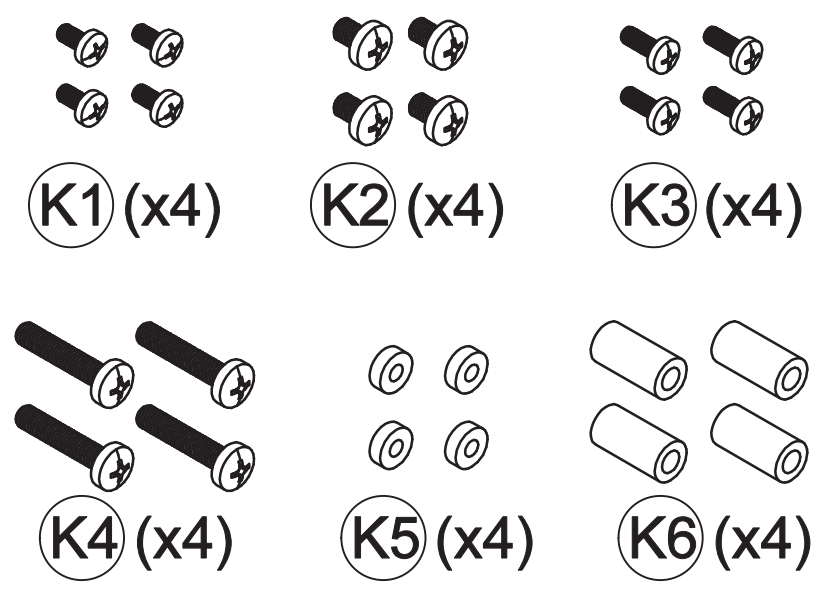


Screw List			
K1		Screw M6x12	x4
K2		Screw M8x12	x4
K3		Screw M6x20	x4
K4		Screw M8x40	x4
K5		Washer	x4
K6		Distance Washer	x4


1 Position Cabinet on the wall

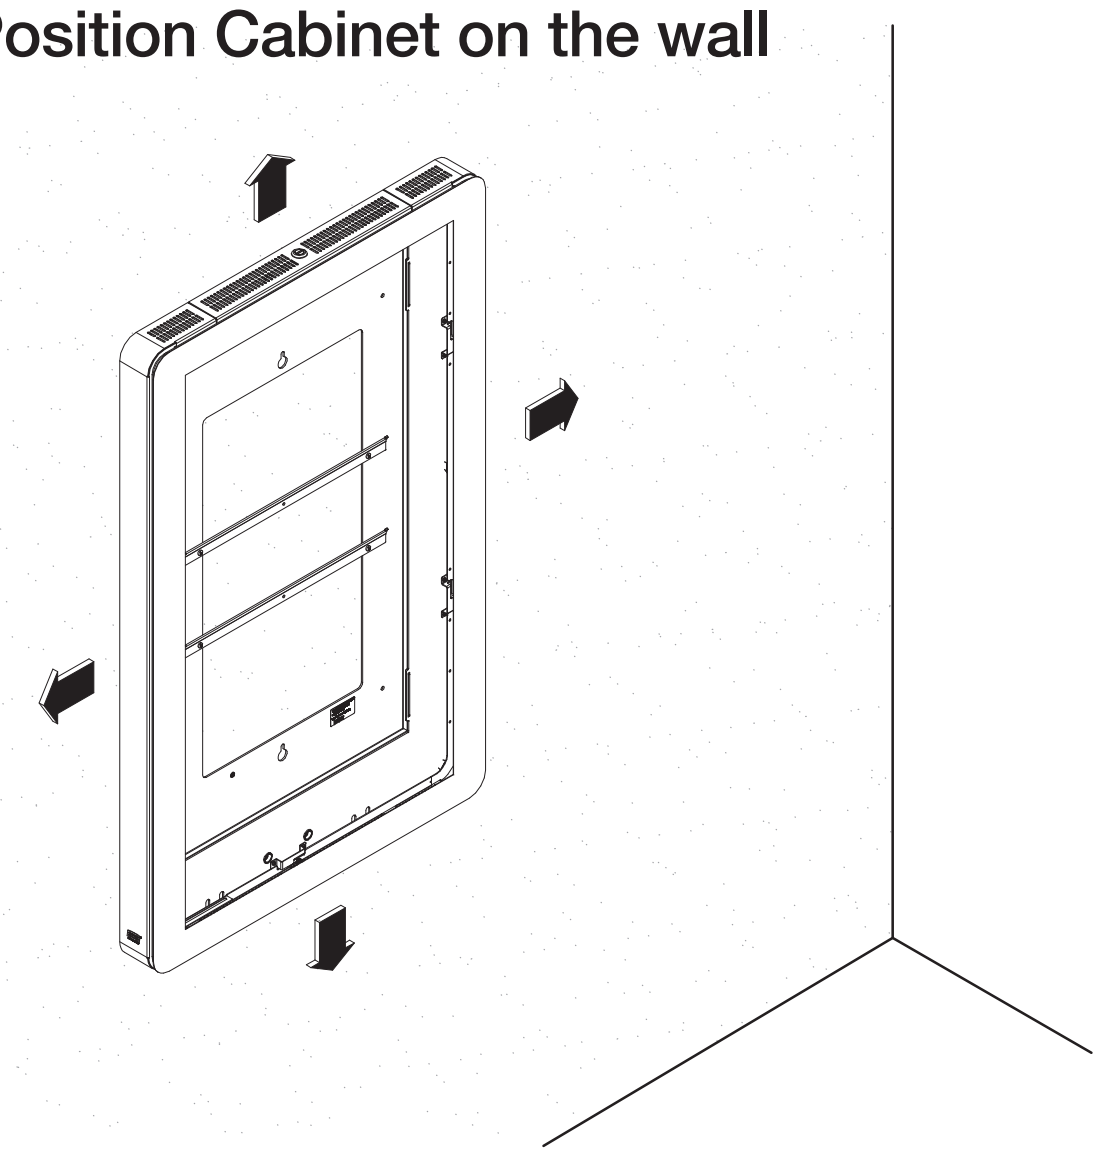



Mark the position

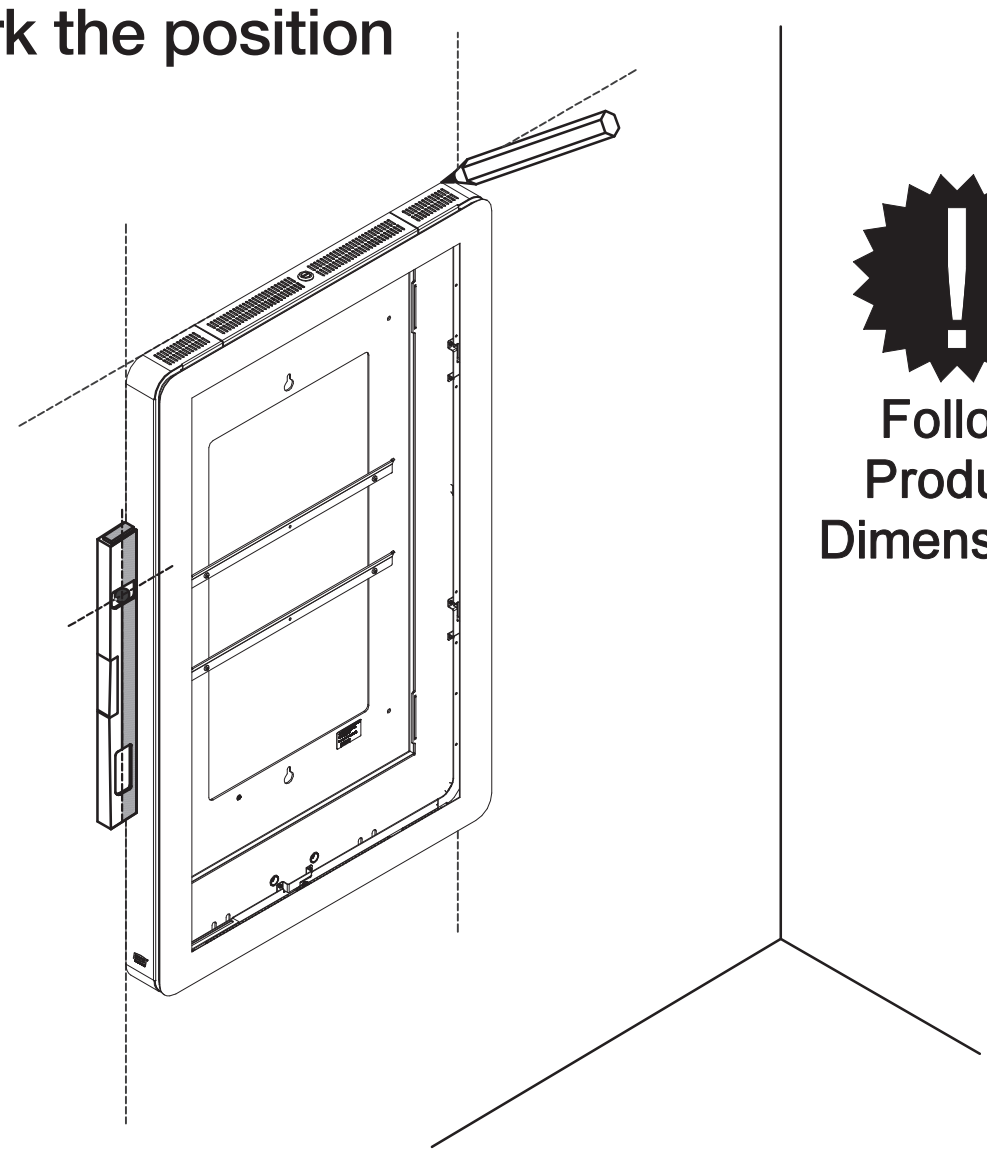



Follow Product Dimensions!

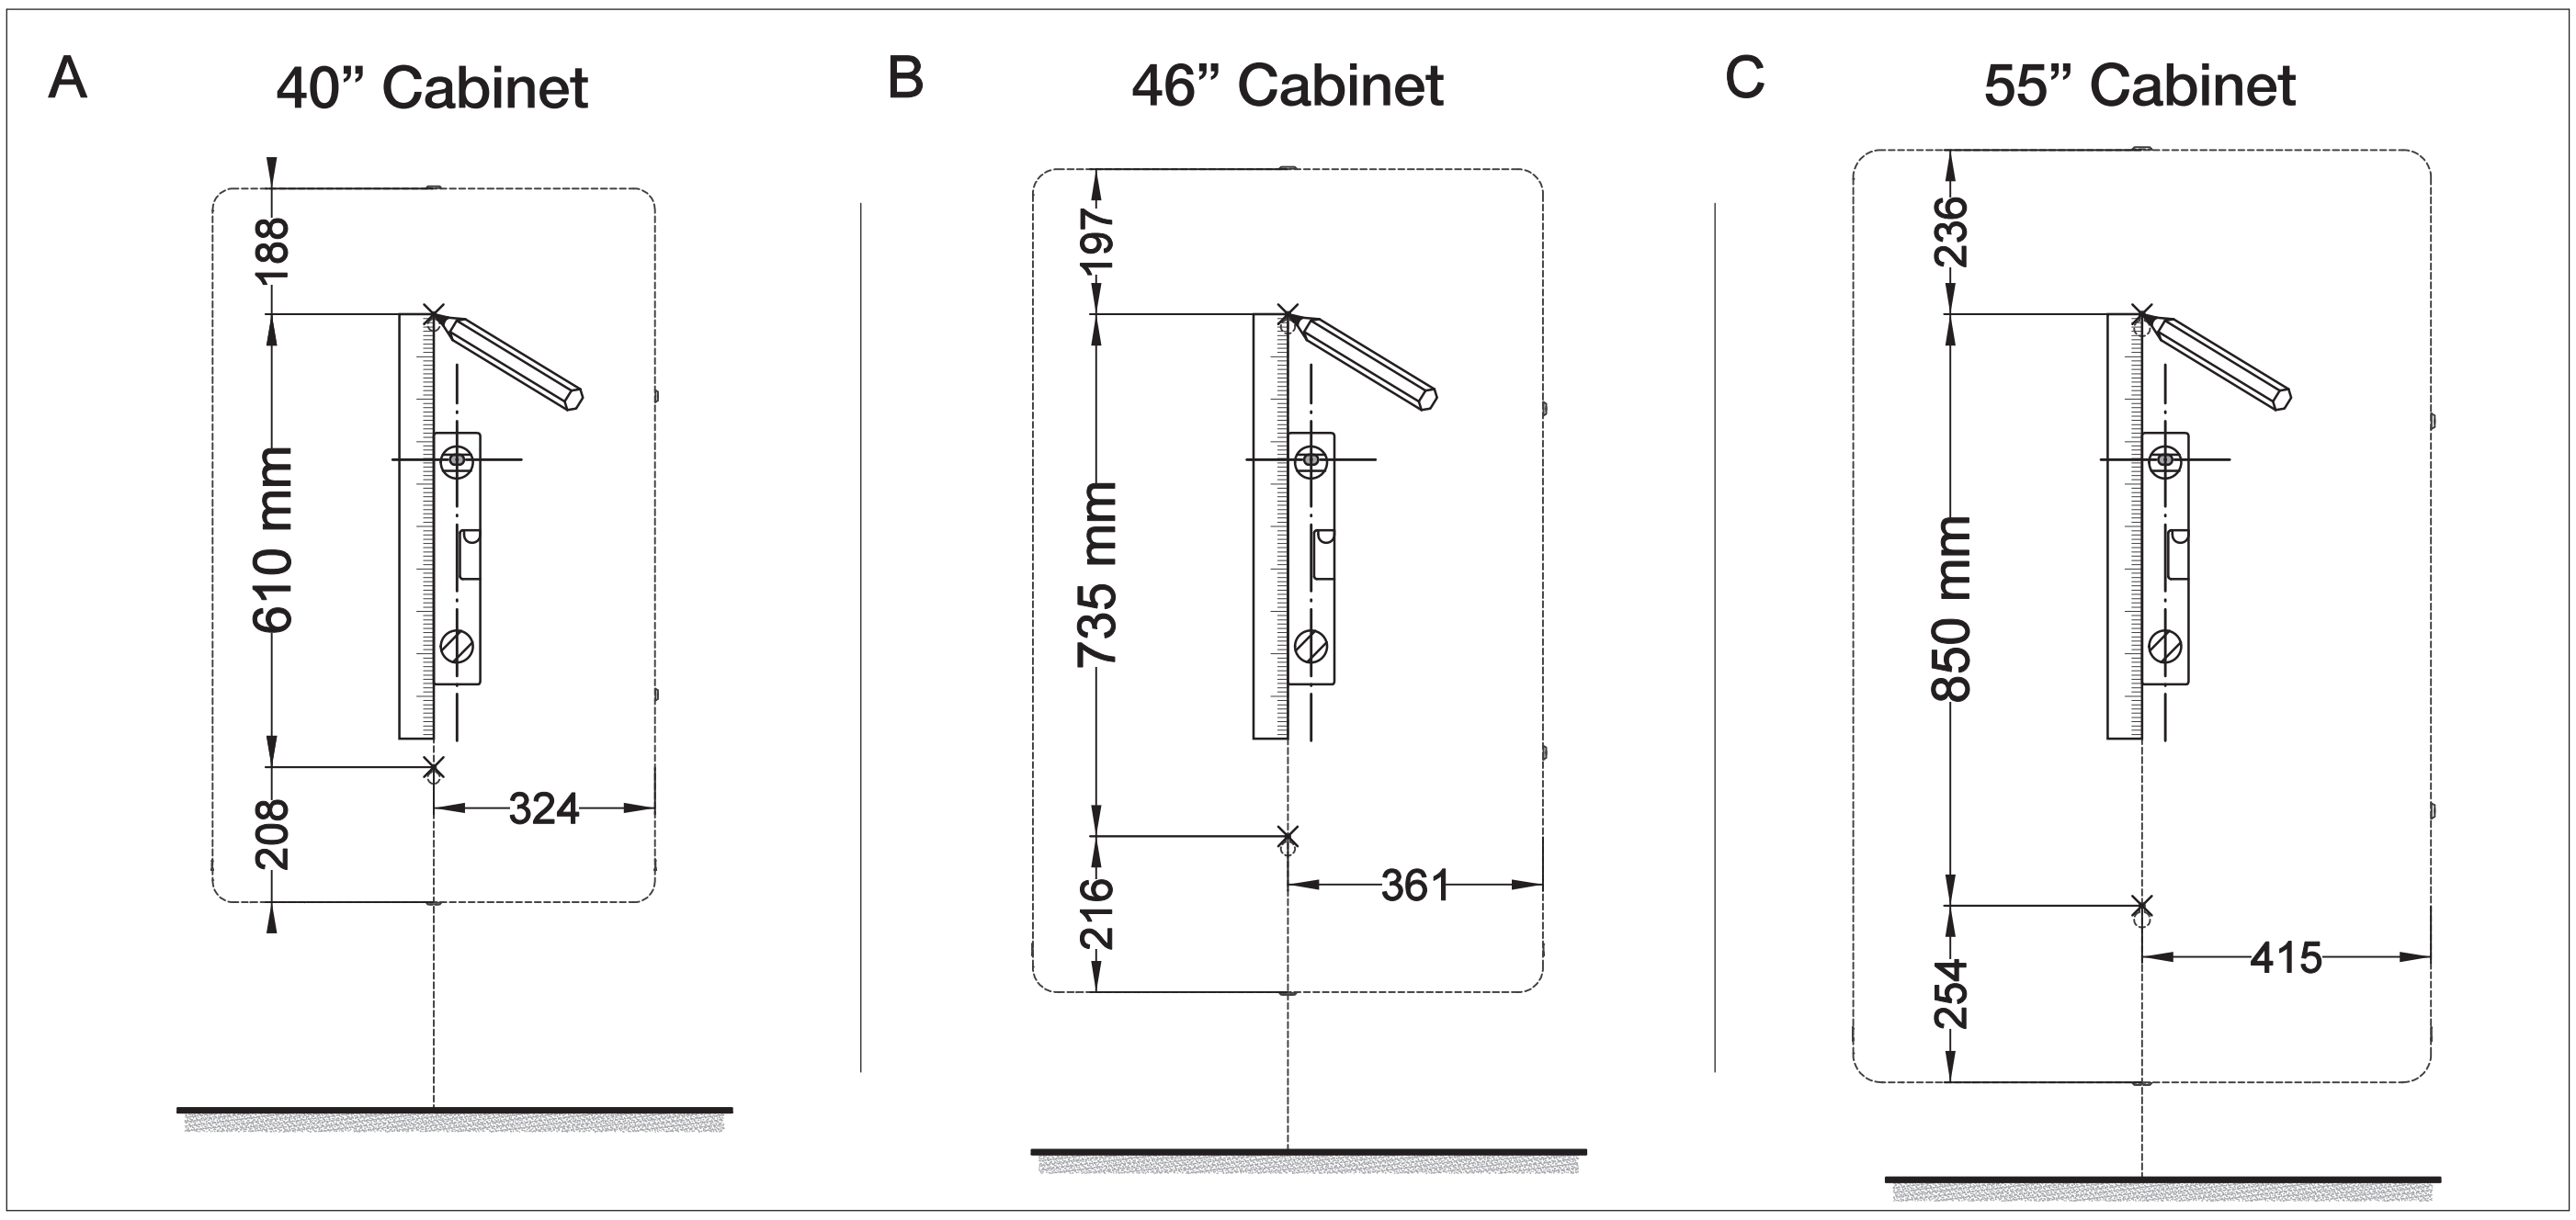

A
40” Cabinet
188
610 mm
208
324
B
46” Cabinet
197
735 mm
216
361
C
55” Cabinet
236
850 mm
254
415

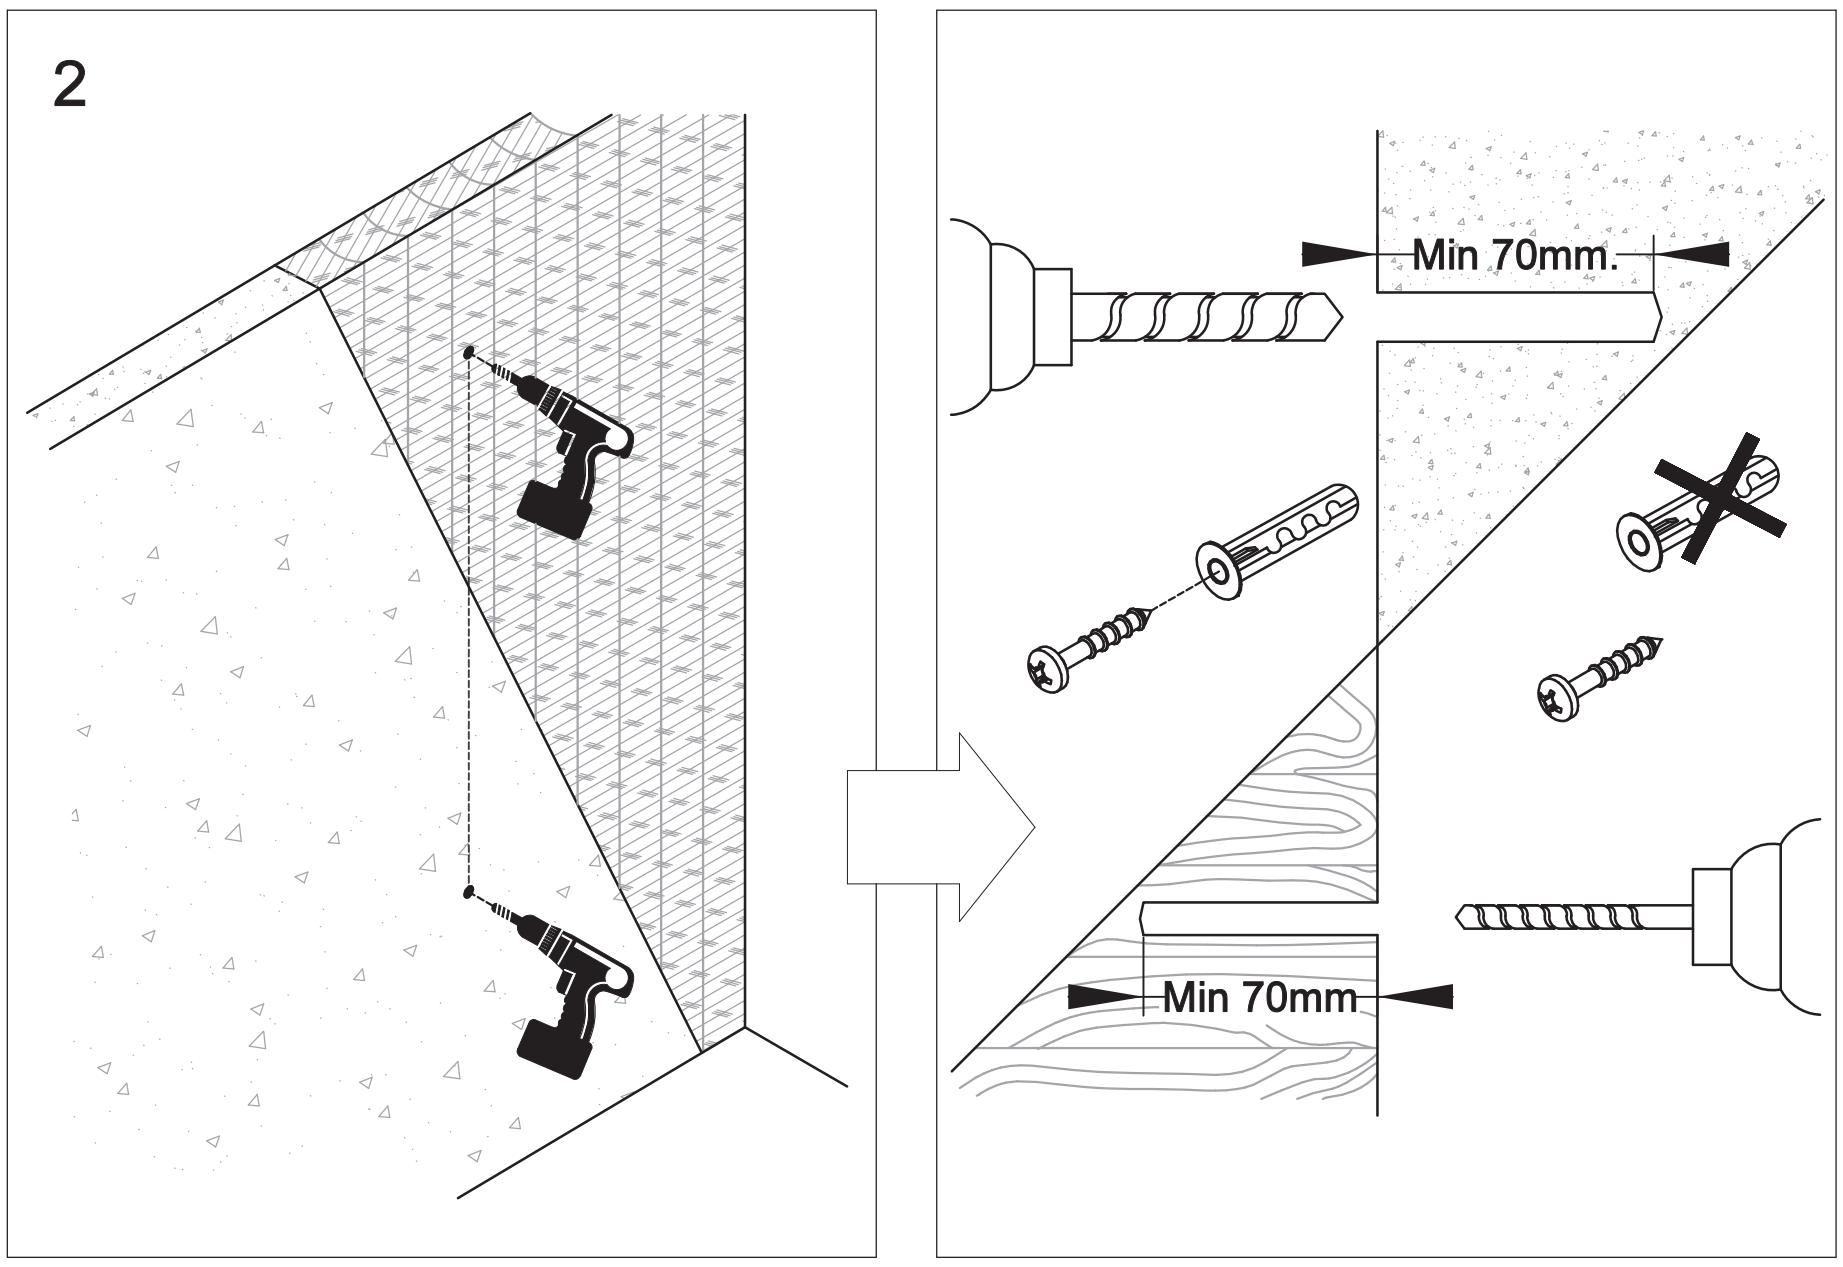

2
Min 70mm.
Min 70mm

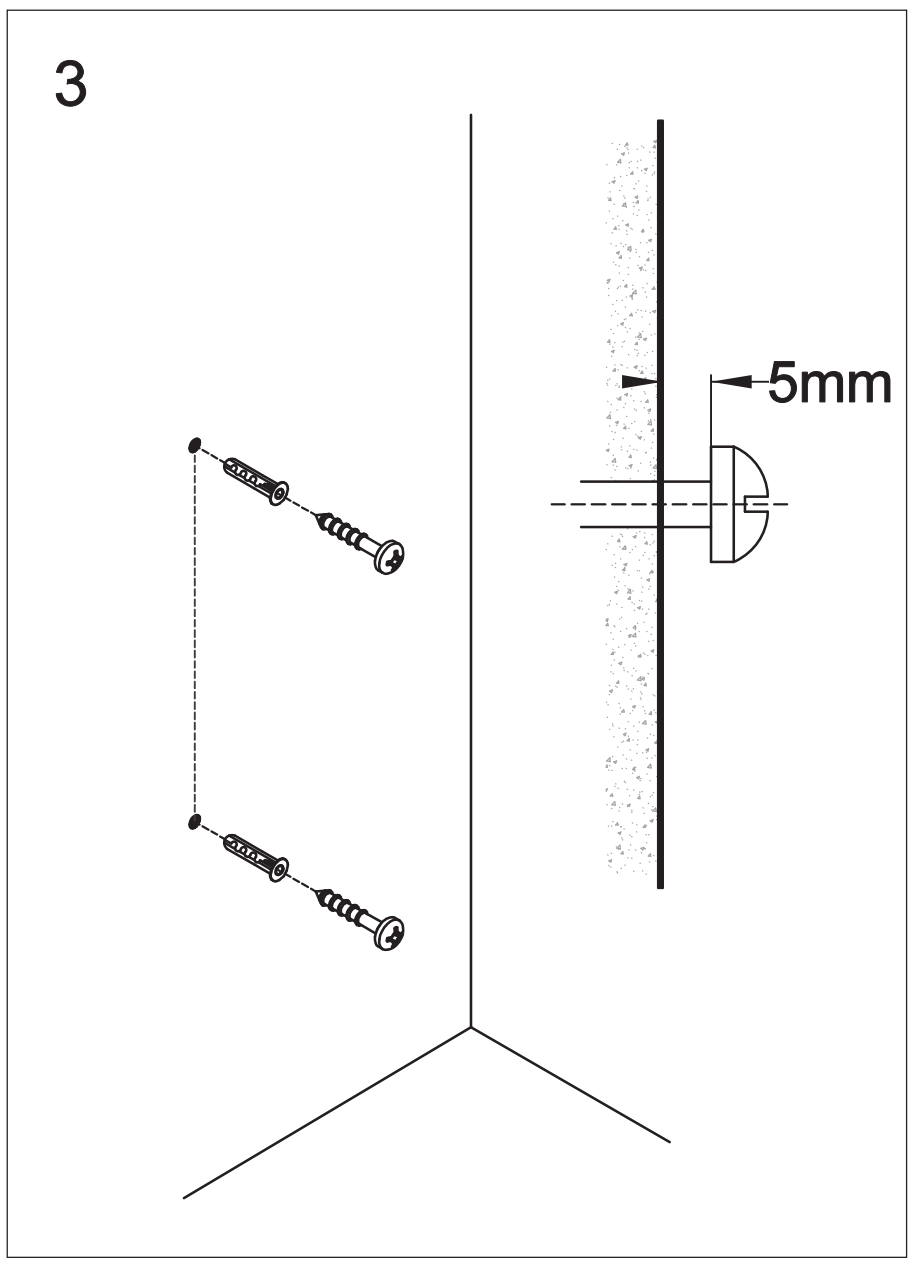

3
5mm

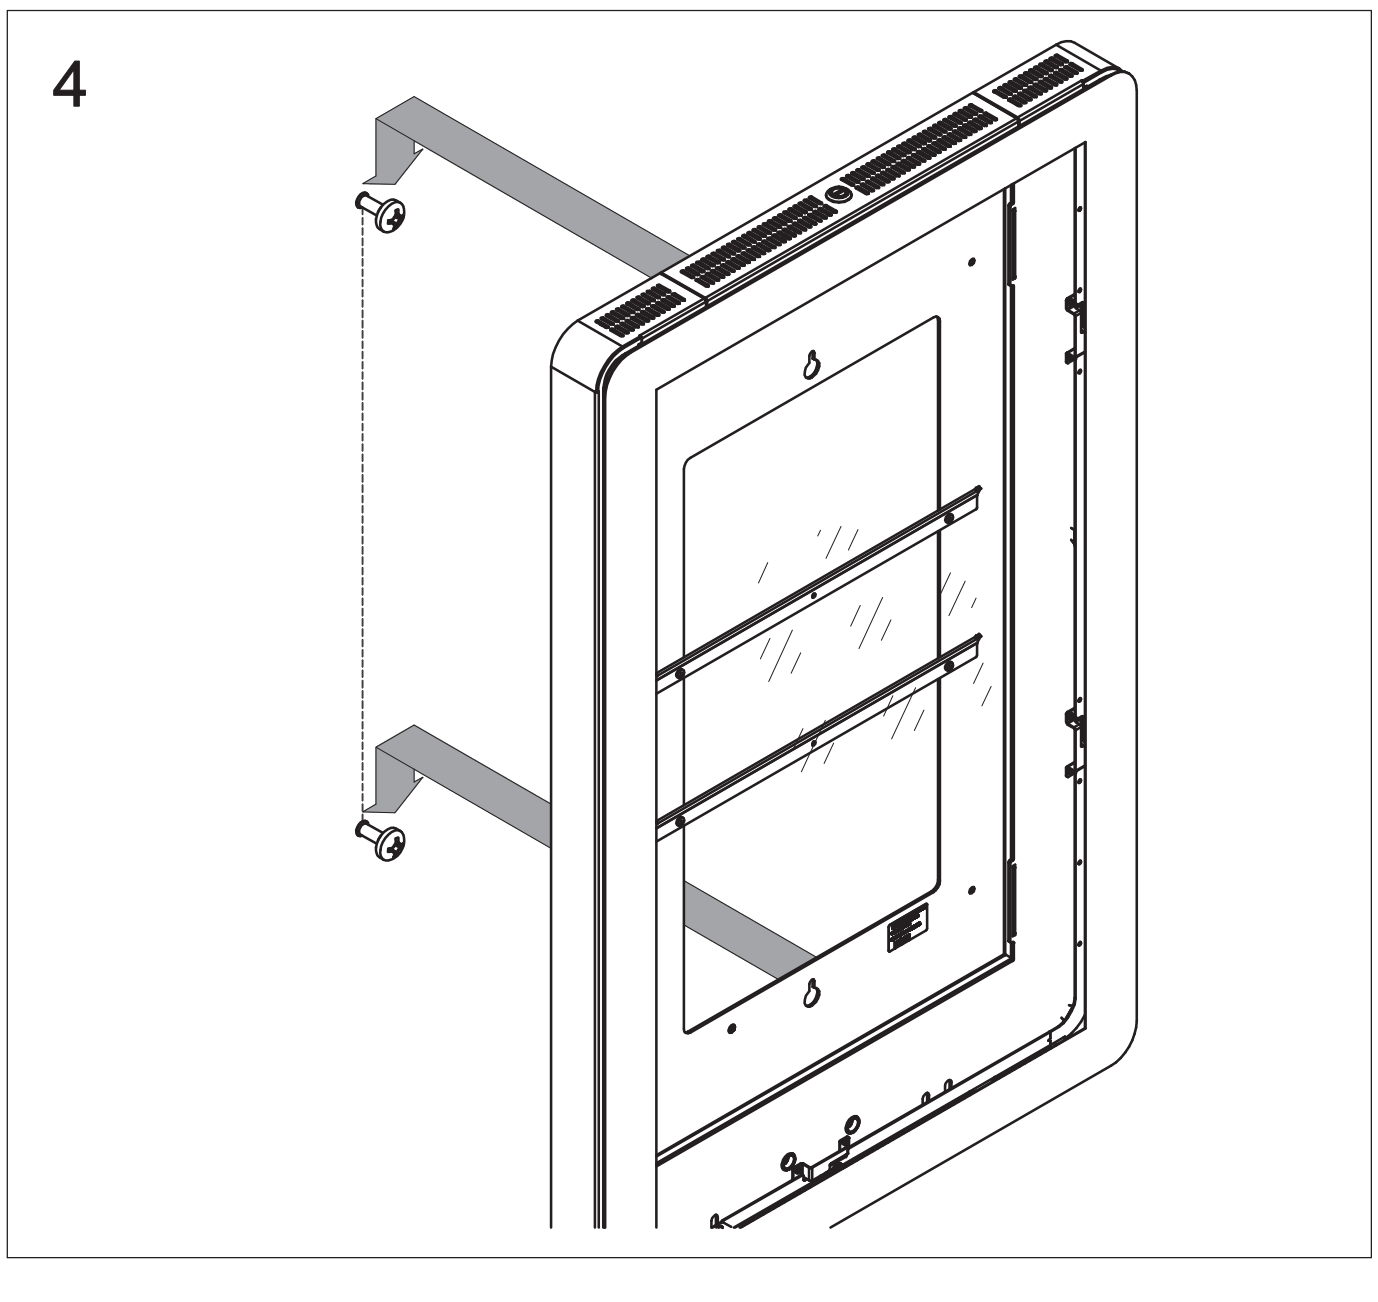

4

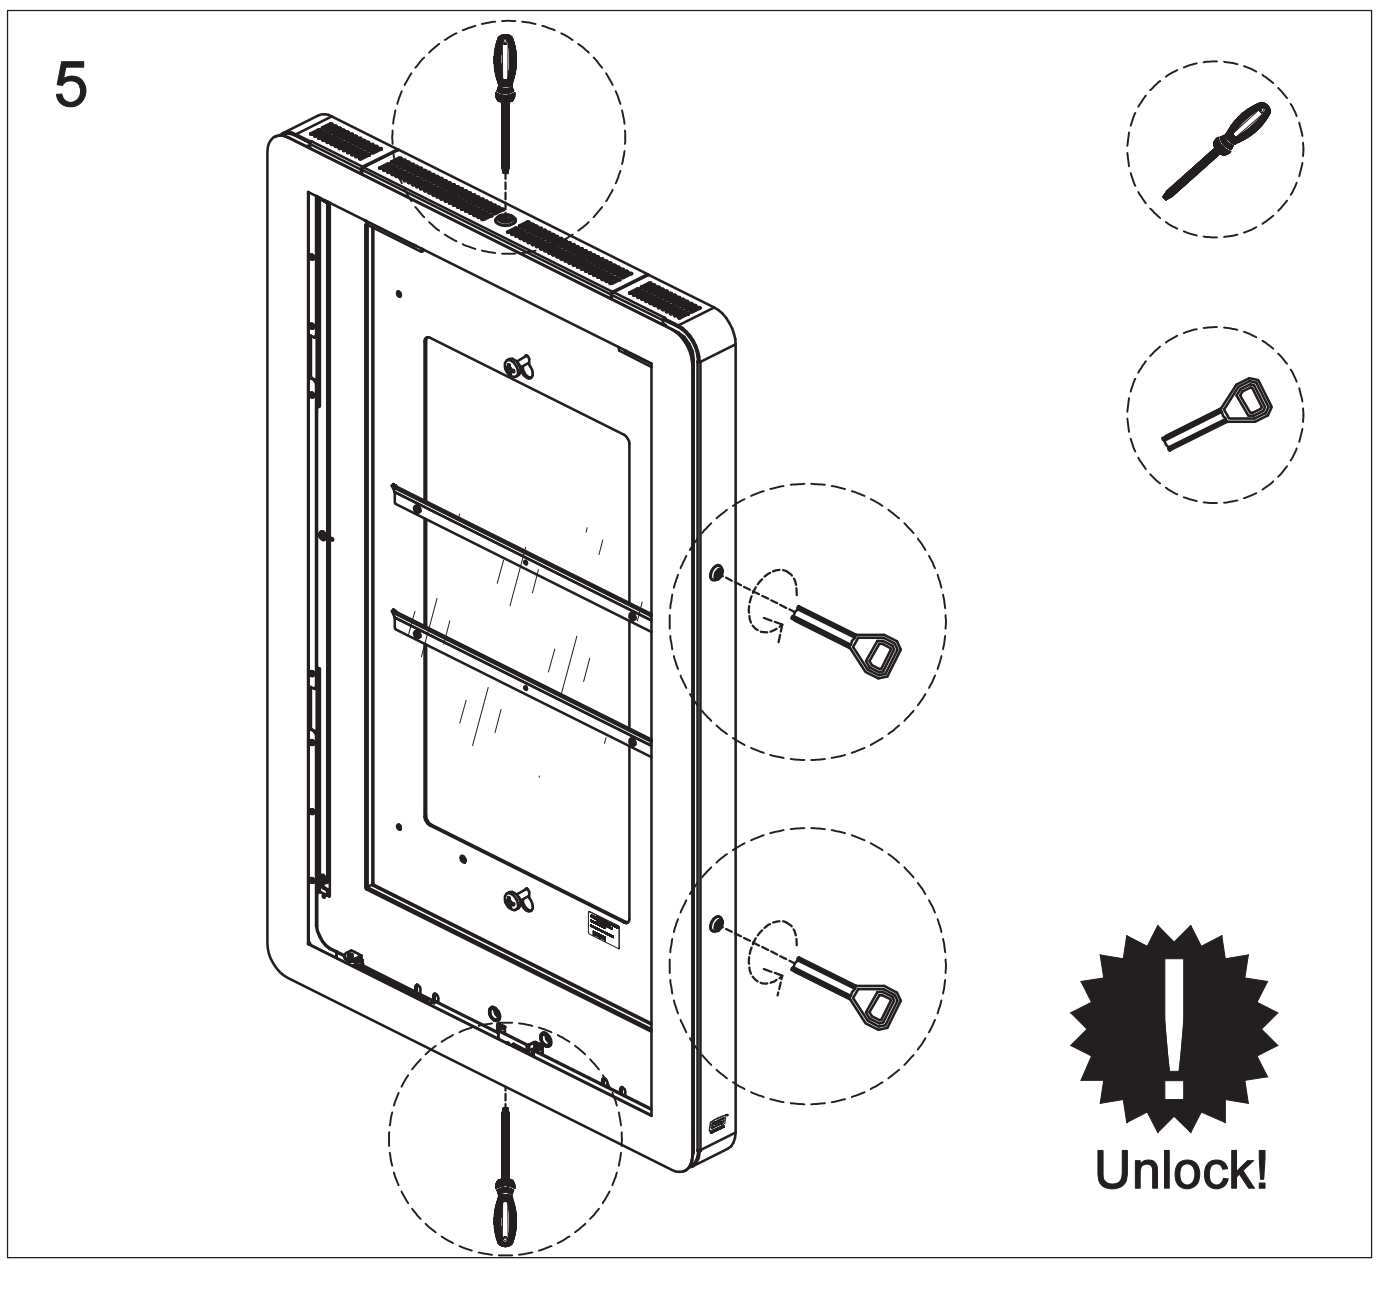
5
Unlock!

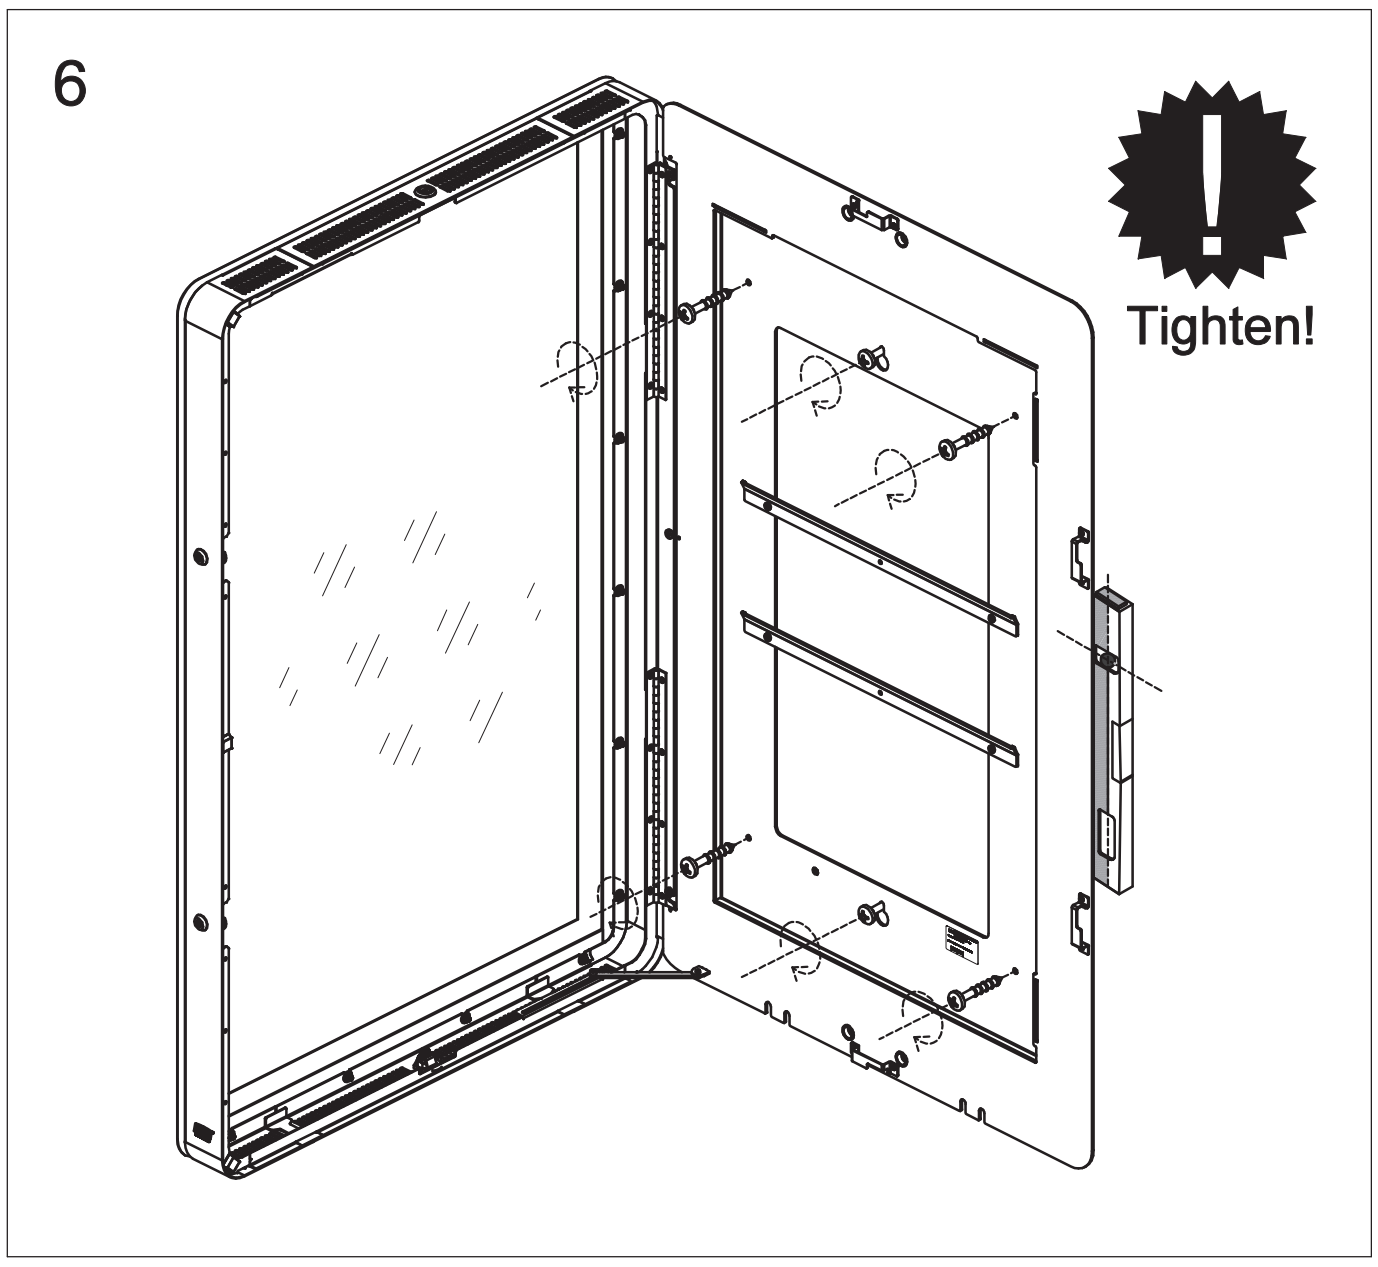

6
Tighten!

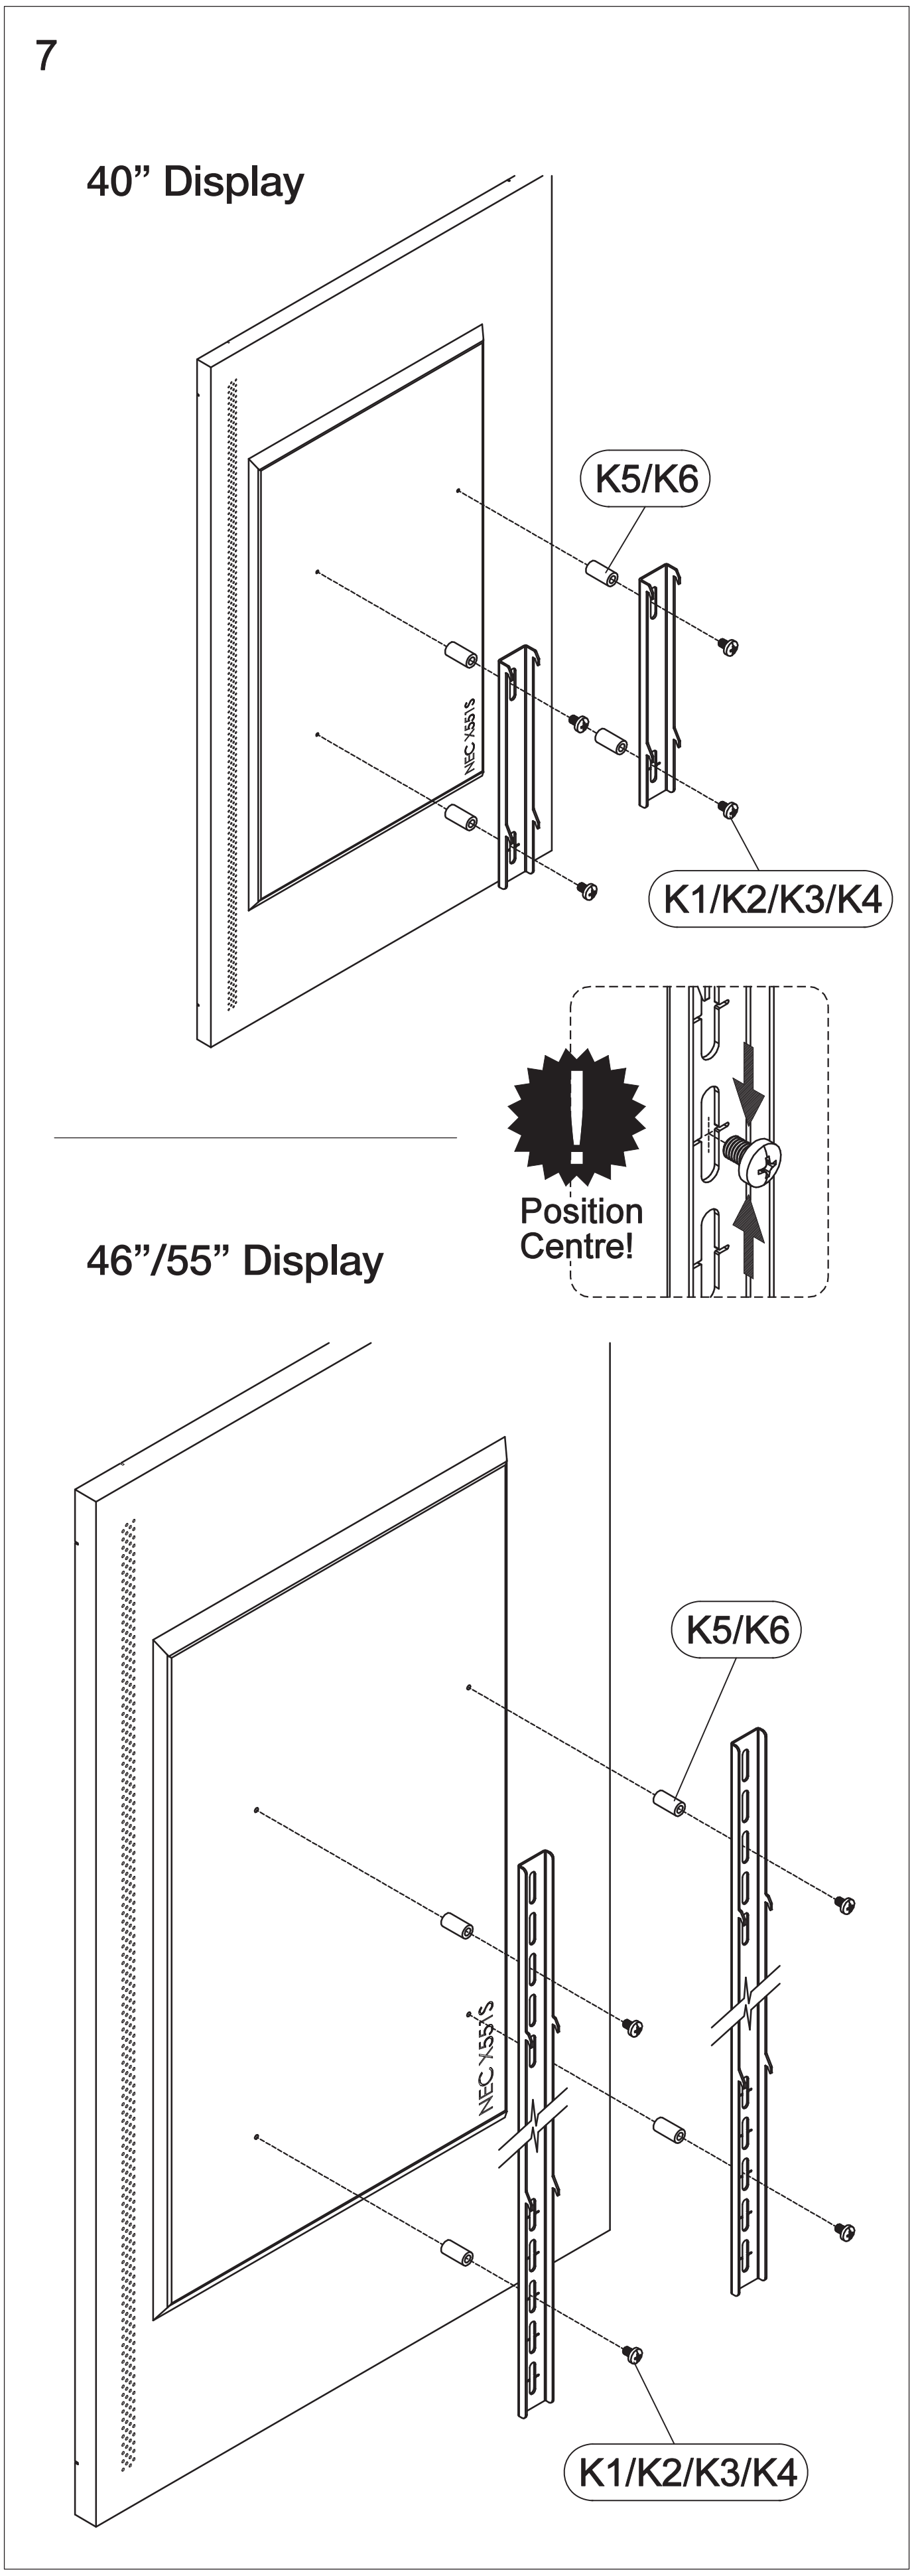

7
40" Display
K5/K6
K1/K2/K3/K4
Position
Centre!
46"/55" Display
K5/K6
K1/K2/K3/K4

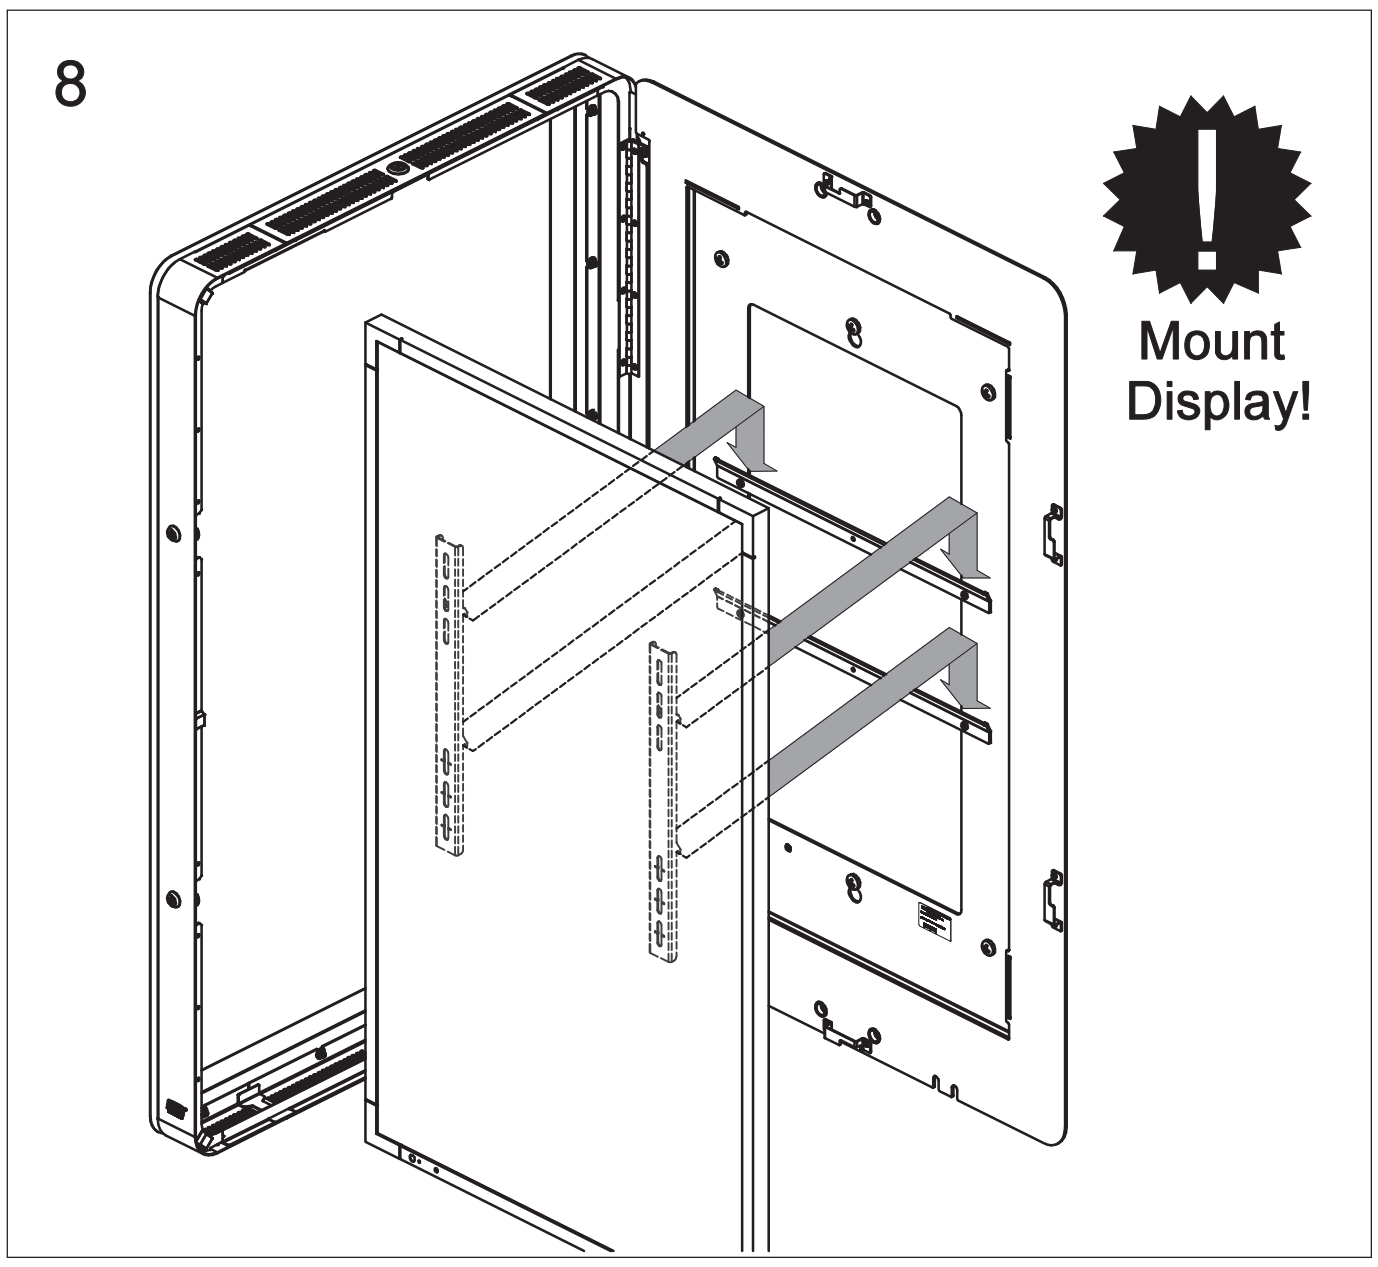
8
Mount
Display!

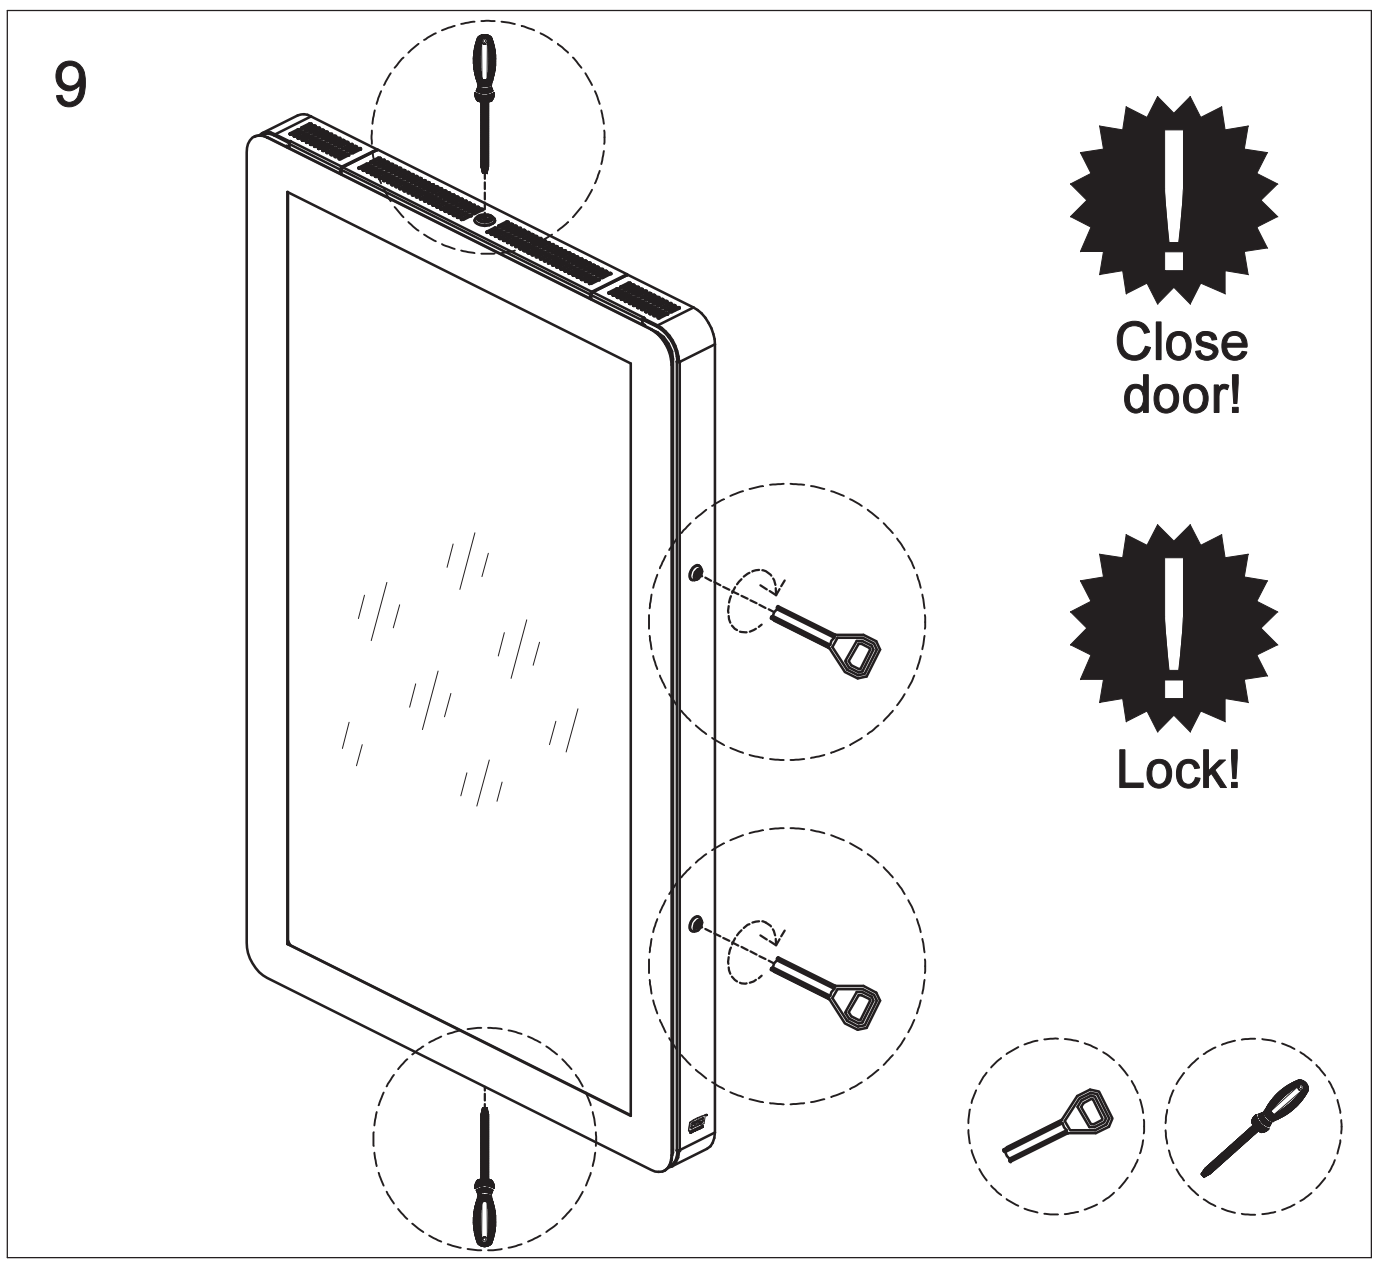

9
Close
door!
Lock!

How to dismount the door

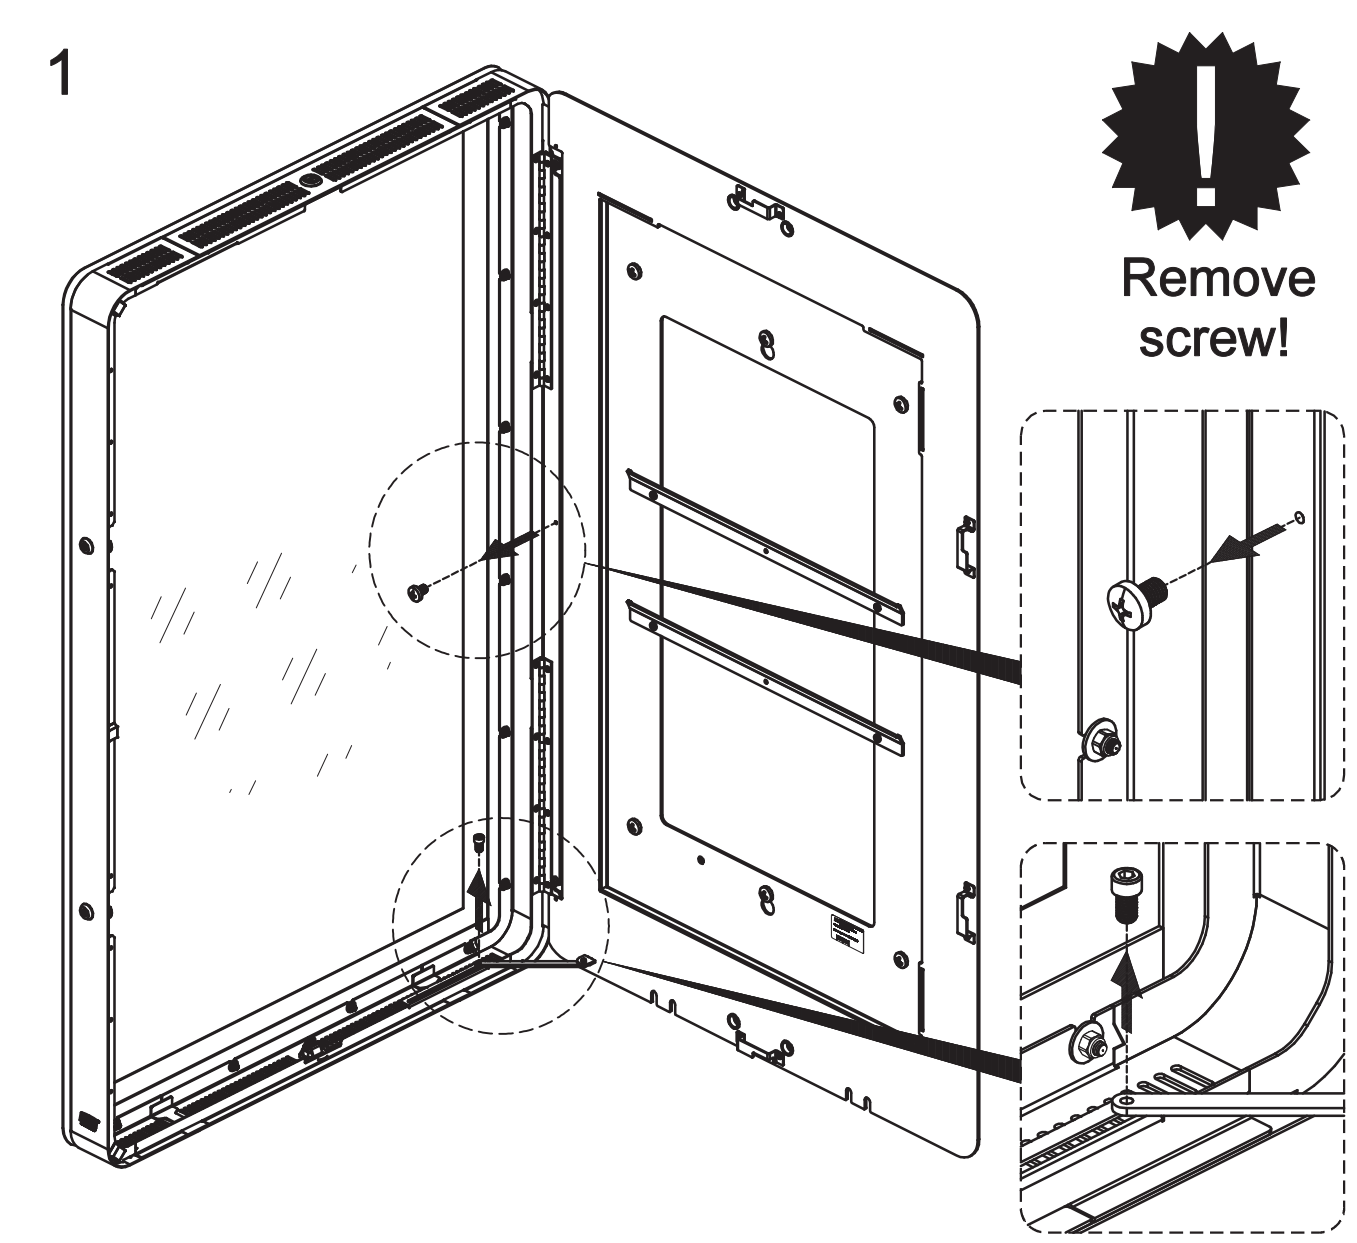


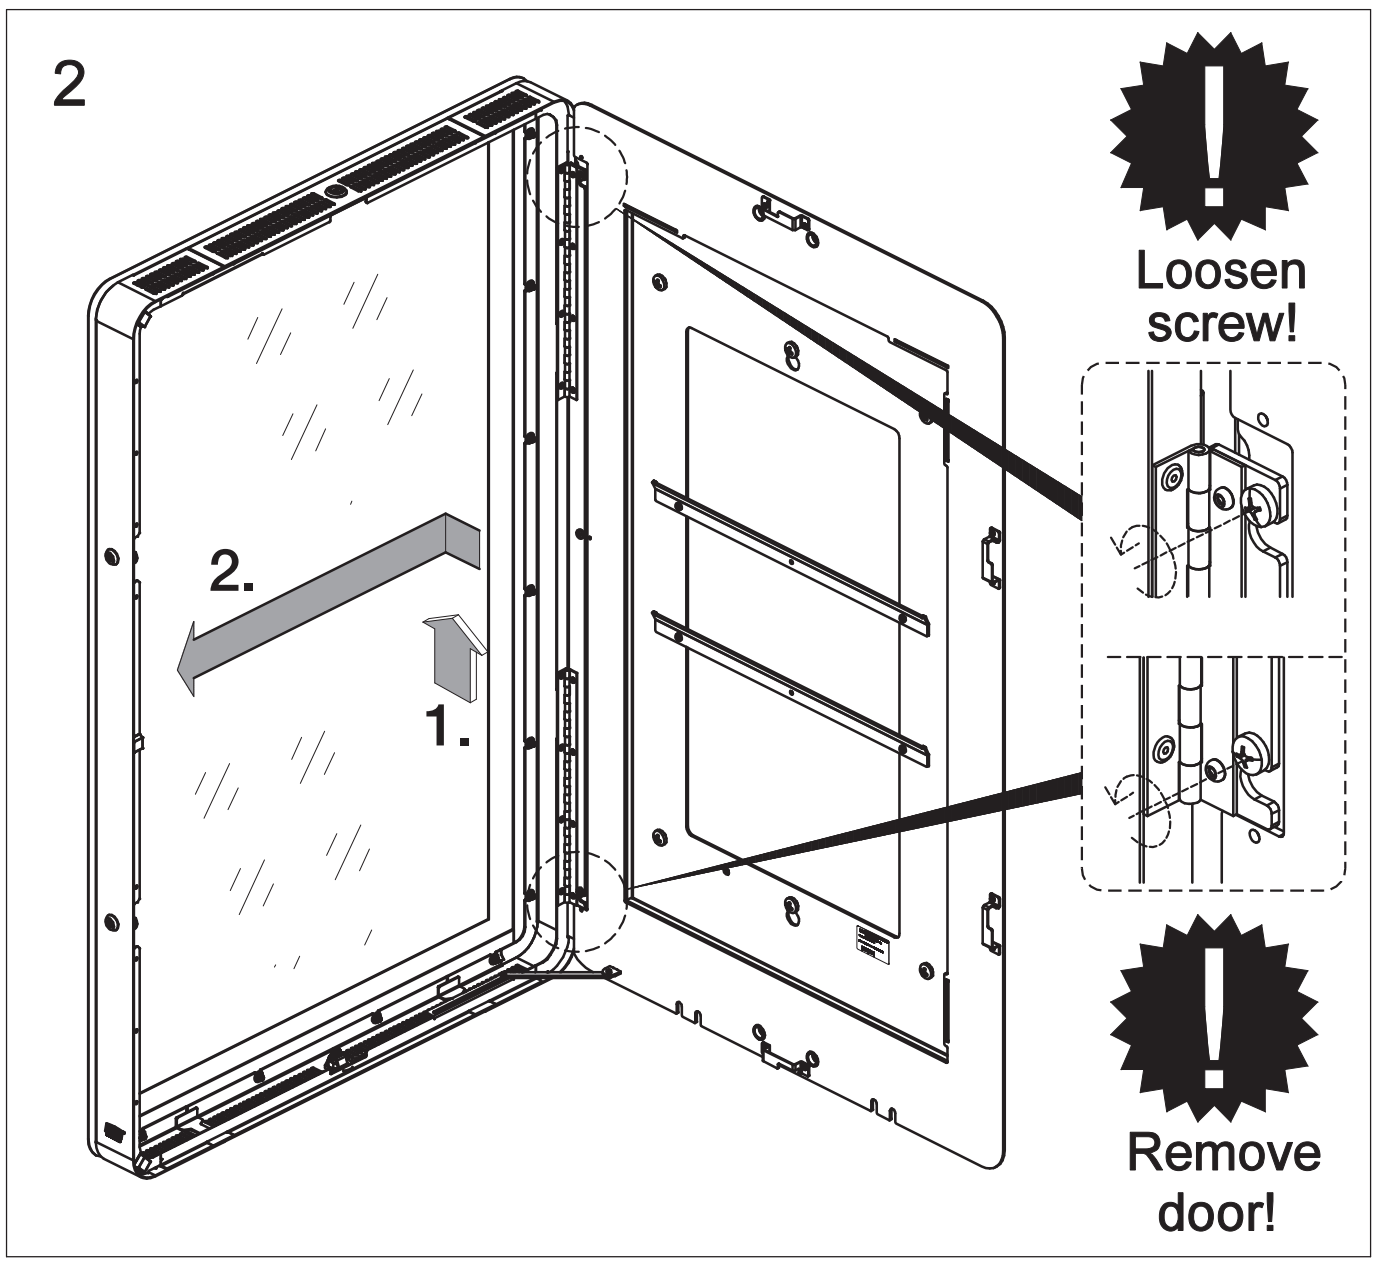

How to remove the glass

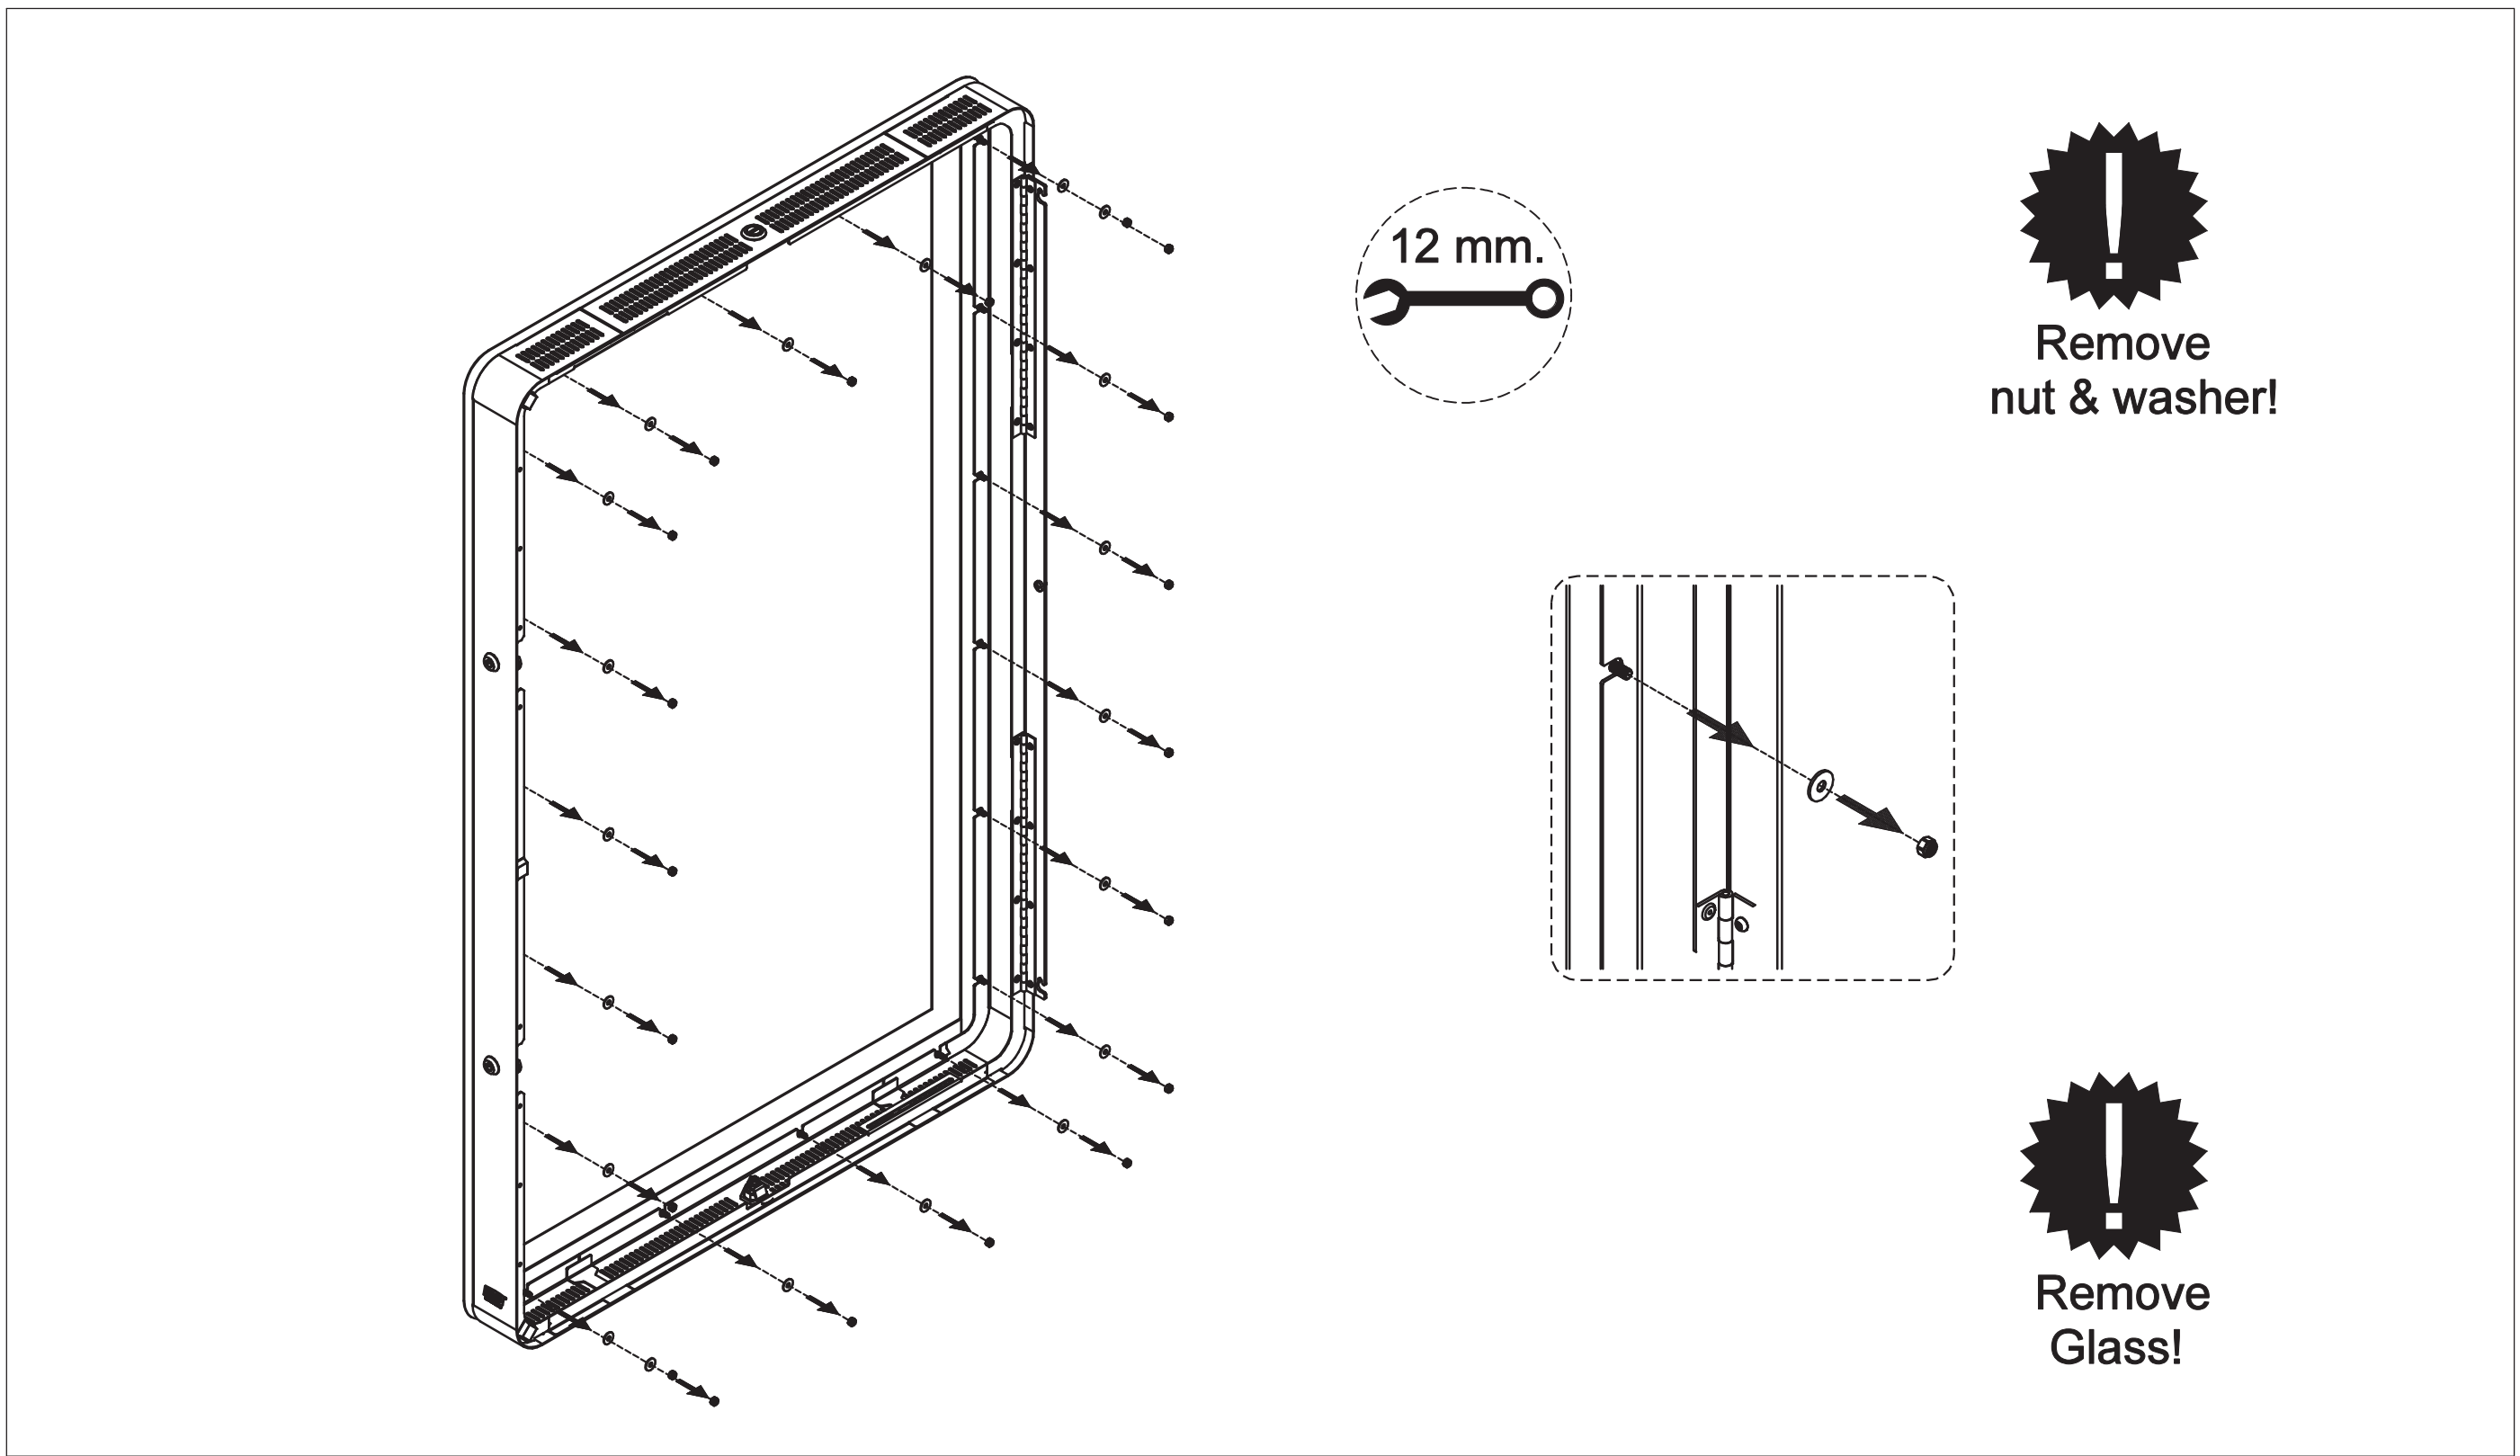

Product Dimensions

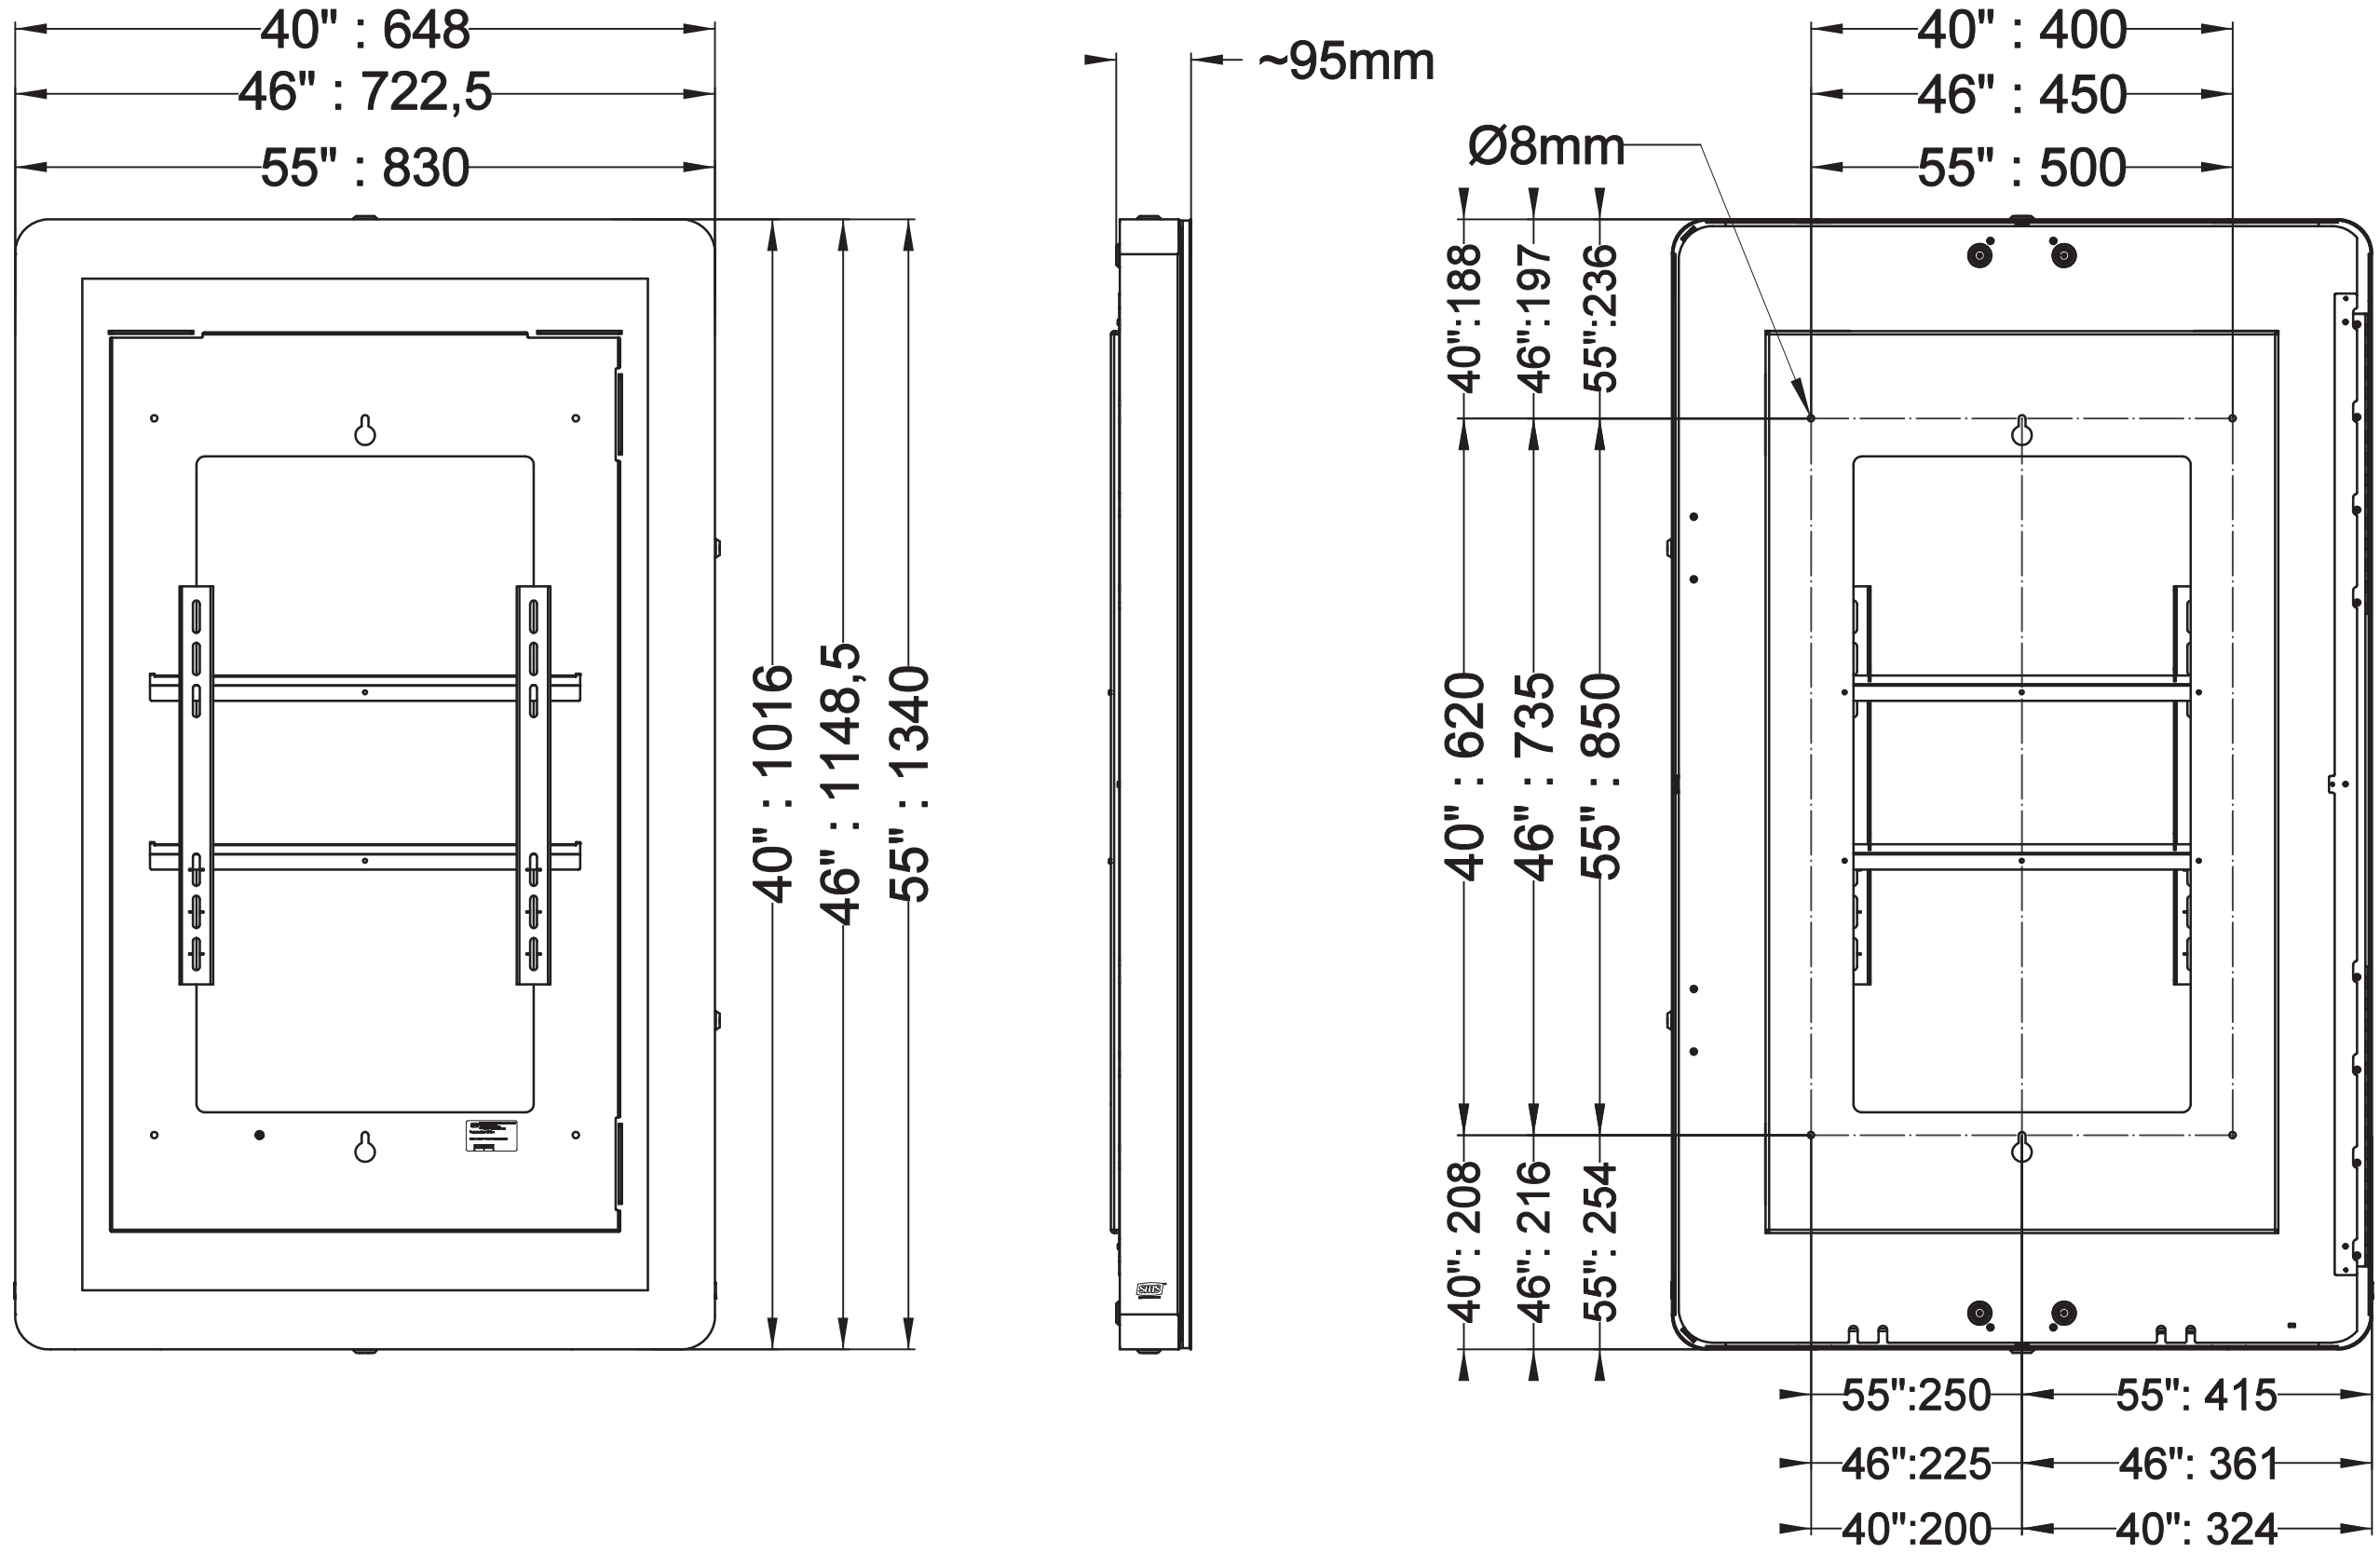

All dimensions in mm.

2012-10-12 Doc no: M000089 / IN020XXX Rev. A We reserve the right to introduce changes in the product specifications after the publishing of this document.

SMART MEDIA SOLUTIONS